## **MODEL: T7402B**



### SEVEN-DAY DIAL TIME SWITCH WITH SPRING WOUND CARRY-OVER MOTOR **4 POLE SINGLE THROW**

MINIMUM "ON" TIME 3-1/2 HR. UP TO 3-1/2 DAILY ON-OFF OPERATIONS

40 AMP. RESISTIVE EACH POLE 120V-480V AC. 40 AMP. INDUCTIVE, TUNGSTEN EACH POLE 120V, 208V, 240V, OR 277V AC. 1000 VA PILOT DUTY EACH POLE 120V - 277V AC. 24 FLA, 144 LRA (2 HP) - 120V AC.; 28 FLA, 168 LRA (5 HP) - 240V AC. SINGLE PHASE

28 FLA, 168 LRA (7 1/2 HP)-208V AC., (10 HP)-240V AC. 3 PHASE CLOCK MOTOR: 208-277 VOLTS - 60 HZ.

FOR REPLACEMENT MOTOR, ORDER 131T69GA



#### WIRING INSTRUCTIONS

This Time Switch can be wired to control one to four circuits simultaneously on a seven day schedule. Clock motor voltage may be other than load voltage, but must be as specified. For terminal markings, internal wiring and contact arrangements refer to wiring diagram above. Use solid or stranded COPPER wire with insulation to suit installation. See table for gauge selection.

To make power connections remove 1/2 inch of insulation from wire ends. Insert bare ends of wire under the pressure plate of terminals. Use 3/16 or larger screw driver to tighten terminal screws firmly. REPLACE FRONT INSULATOR BEFORE TURNING ON ELECTRICITY.

MINIMUM COPPER WIRE SIZE (AWG)	MAX. Load (AMP)	MIN. Insul- Ation Temp(°C	75°C INSULATION MAX. MOTOR Load (HP)				PRESSURE PLATE
			SINGL 120 V.	E PHASE 240 V.	3 PH 208 V.	ASE 240 V.	TERMINAL SCREW MAKE SURE WIRE INSULATION CLEARS PRESSURE PLATE
14 12 10 8	15 20 30 40	60 60 60 75	1/2 1 2 -	2 2 1/2 3 5	3 4 5 7 1/2	3 5 7 1/2 10	

#### **PROGRAMMING INSTRUCTIONS**

- 1. TO SET "ON" TIMES, place bright ON trippers against edge of CLOCK-DIAL at day-of-week and time-of-day when "ON" operations are desired. Tighten tripper screws securely. 2. TO SET "OFF" TIMES, place dark OFF trippers against edge of CLOCK-DIAL at
- times when "OFF" operations are desired. Tighten tripper screws securely.
- 3. TO SKIP DAYS, omit trippers for the day(s) automatic operations is/are not required. 4. TO SET DIAL TO TIME-OF-DAY, turn dial CLOCKWISE and align the exact day-ofweek and time-of-day (AM or PM) on dial with the TIME POINTER. Some allowance may be required to compensate for gear backlash.

CAUTION: DO NOT MOVE POINTER OR FORCE DIAL COUNTERCLOCKWISE. **OPERATING INSTRUCTIONS** 

- TO OPERATE SWITCH MANUALLY: Move MANUAL LEVER below CLOCK-DIAL left or right as indicated by arrows. This will not affect next automatic operation.
- IN CASE OF POWER FAILURE OR TO ADVANCE/RETARD TIME: Reset time-ofday, see step 4 of programming instructions.

# DISCONNECT ELECTRICITY BEFORE ANY BEHIND-THE-INSULATOR WORK. INTERMATIC INCORPORATED SPRING GROVE, ILLINOIS 60081-9698

158TS10990