
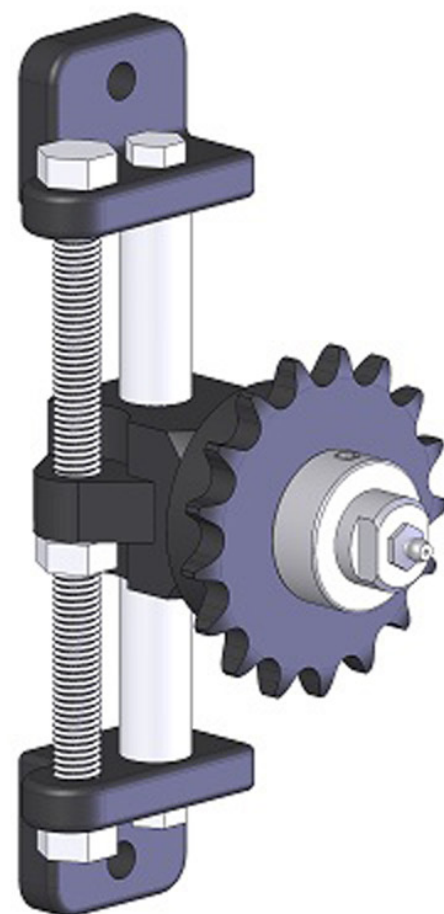


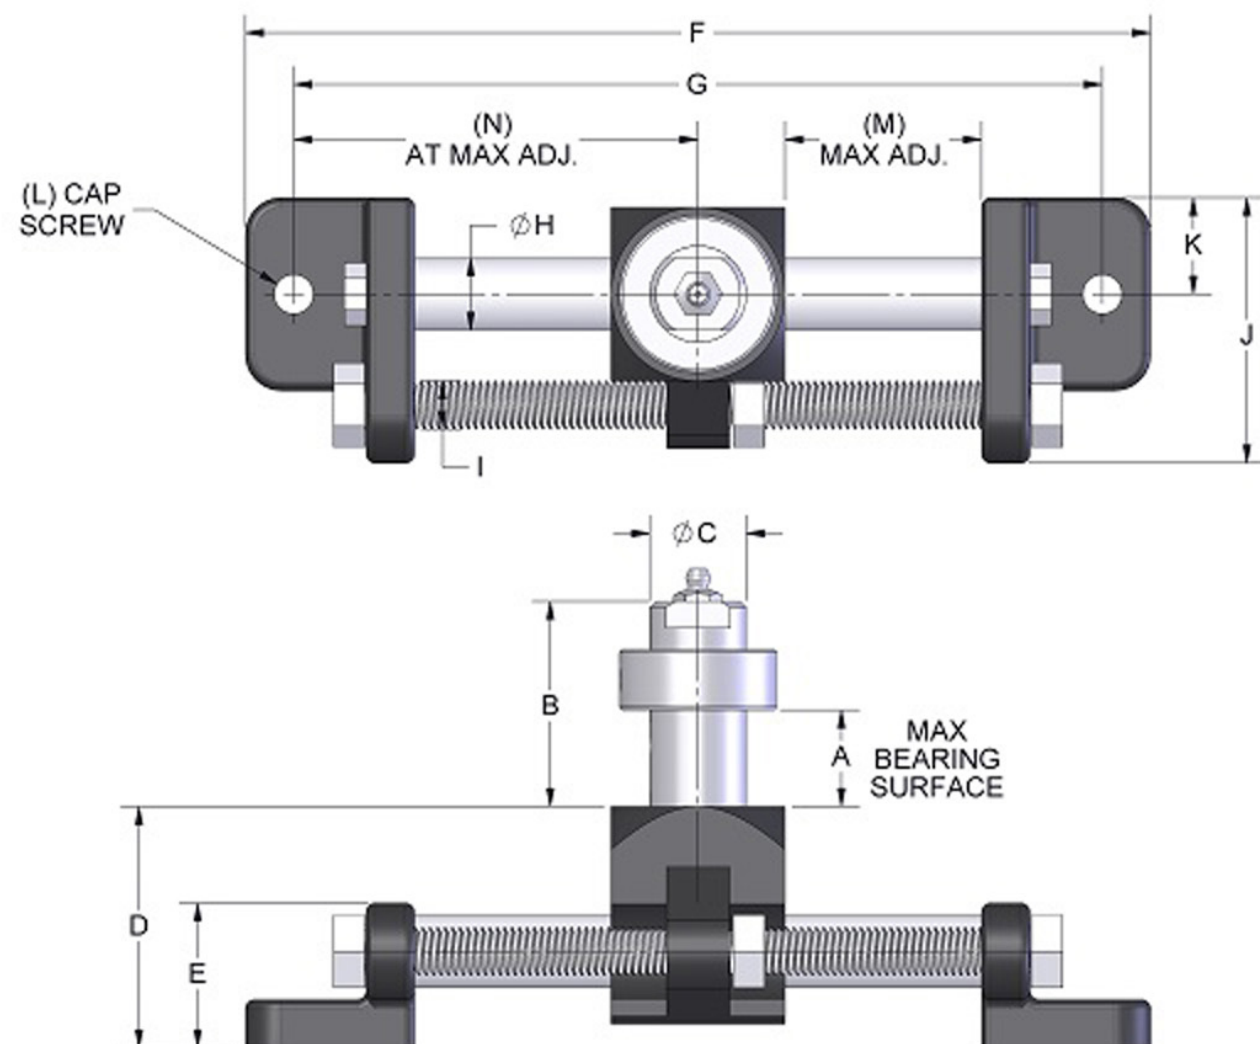

Model No.	Use with Shaft No.*	A	B	C	D	E	F	G	H	I	J	K	L	M	N	App. Wt.
HS	SO1	1-1/16"	1-1/2"	1/2"	1-1/2"	1-1/16"	5-1/2"	4-3/4"	3/8"	1/4"	1-13/16"	3/4"	1/4"	2"	1-3/8"	.84
HM	SO2	1-1/2"	2-1/8"	1"	2-1/2"	1-1/2"	9-3/8"	8-3/8"	3/4"	1/2"	2-3/4"	1"	3/8"	4"	2-3/16"	4.25
	SO3	2-1/2"	3-1/8"													
	SO4	3-1/2"	4-1/8"													
HL	SO5	3-1/4"	4"	1-1/2"	3-5/8"	2-3/8"	16"	14-1/2"	1-1/4"	3/4"	4-3/8"	1-3/4"	5/8"	8"	3-1/4"	15.88
	SO6	5-1/4"	6"													

*Idler shaft & set collar not included in tensioner unit. Must be ordered separately.