


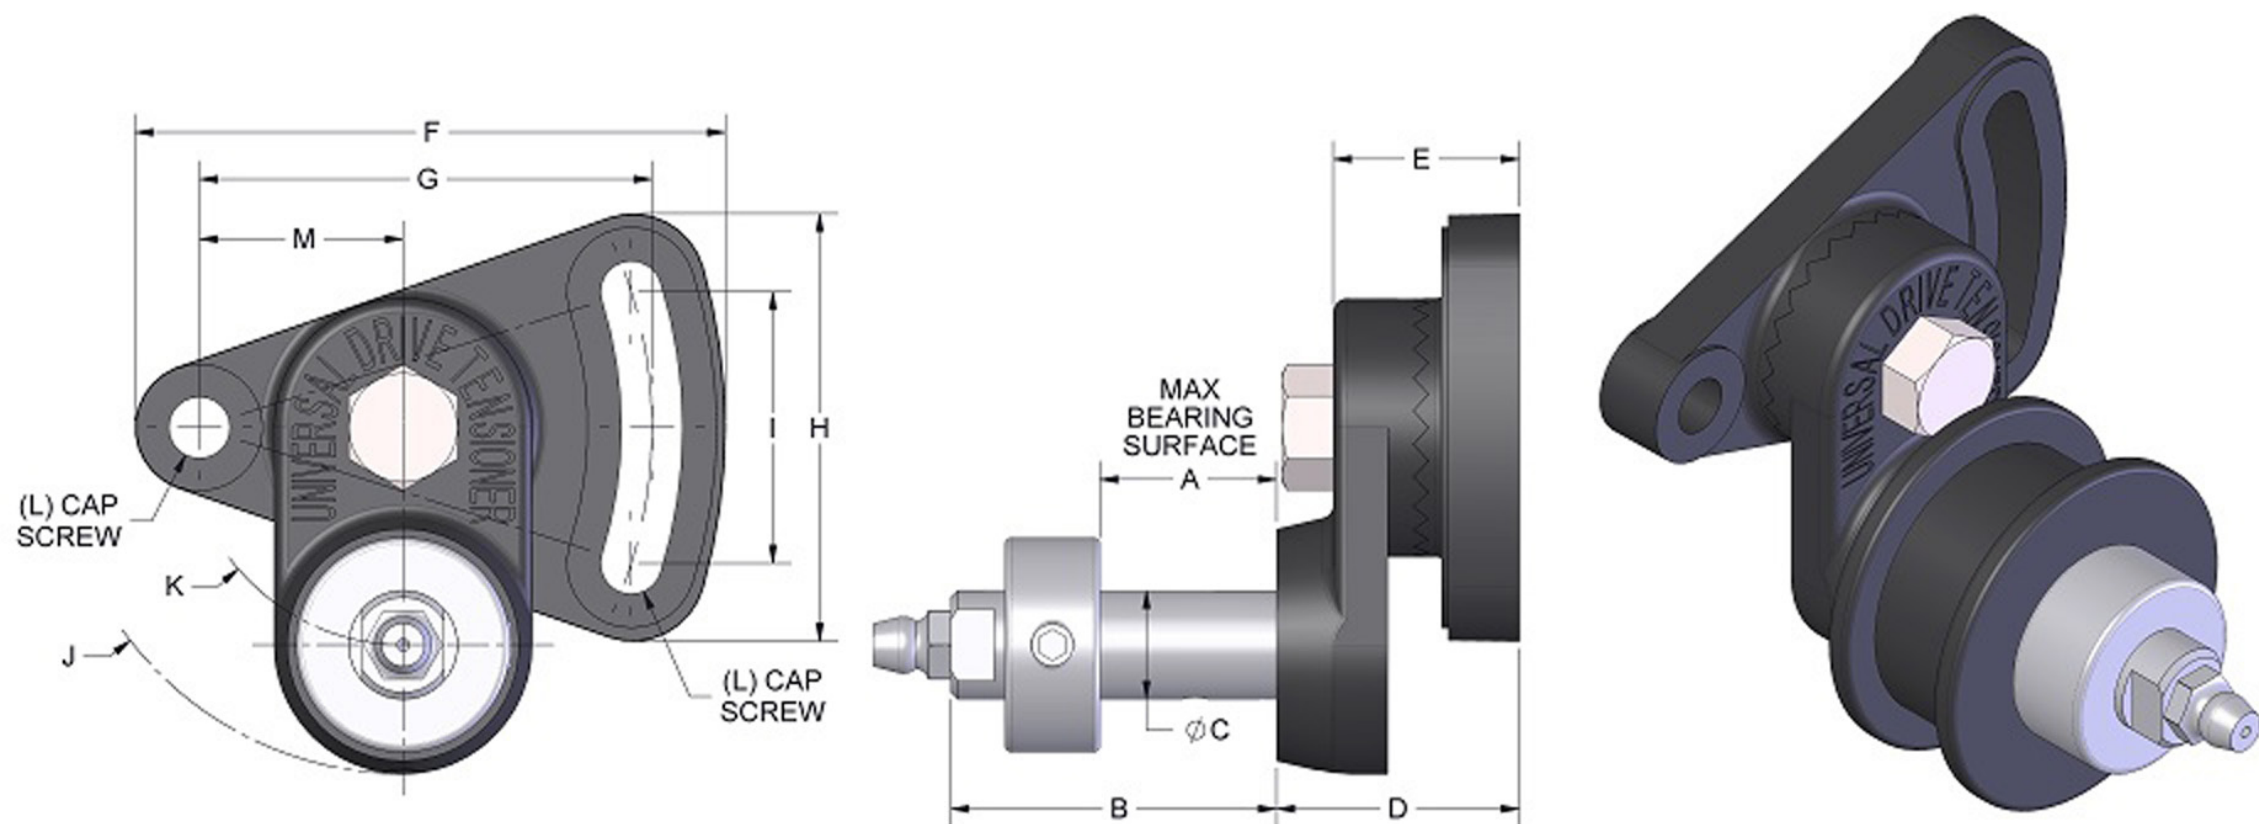

Model No.	Use with Shaft No.*	A	B	C	D	E	F	G	H	I	J	K	L	M	App. Wt.
SS	SO1	1-1/16"	1-1/2"	1/2"	1-3/16"	15/16"	2-23/32"	2"	1-31/32"	1-1/4"	1-9/16"	1"	1/4"	15/16"	.42
SM	SO2	1-1/2"	2-1/8"	1"	1-7/8"	1-1/2"	4-5/8"	3-1/2"	3-1/16"	2-1/16"	3"	2"	3/8"	1-3/4"	2.62
	SO3	2-1/2"	3-1/8"												
	SO4	3-1/2"	4-1/8"												
SM-3/4-10	NO2	1-1/2"	2-1/8"	1"	1-7/8"	1-1/2"	4-5/8"	3-1/2"	3-1/16"	2-1/16"	3"	2"	3/8"	1-3/4"	2.62
	NO3	2-1/2"	3-1/8"												
	NO4	3-1/2"	4-1/8"												
SL	SO5	3-1/4"	4"	1-1/2"	2-25/32"	2-9/32"	6-15/16"	5-1/4"	4-9/16"	3"	6-1/2"	5"	5/8"	2-5/8"	10.13
	SO6	5-1/4"	6"												

*Idle shaft & set collar not included in tensioner unit. Must be ordered separately.