


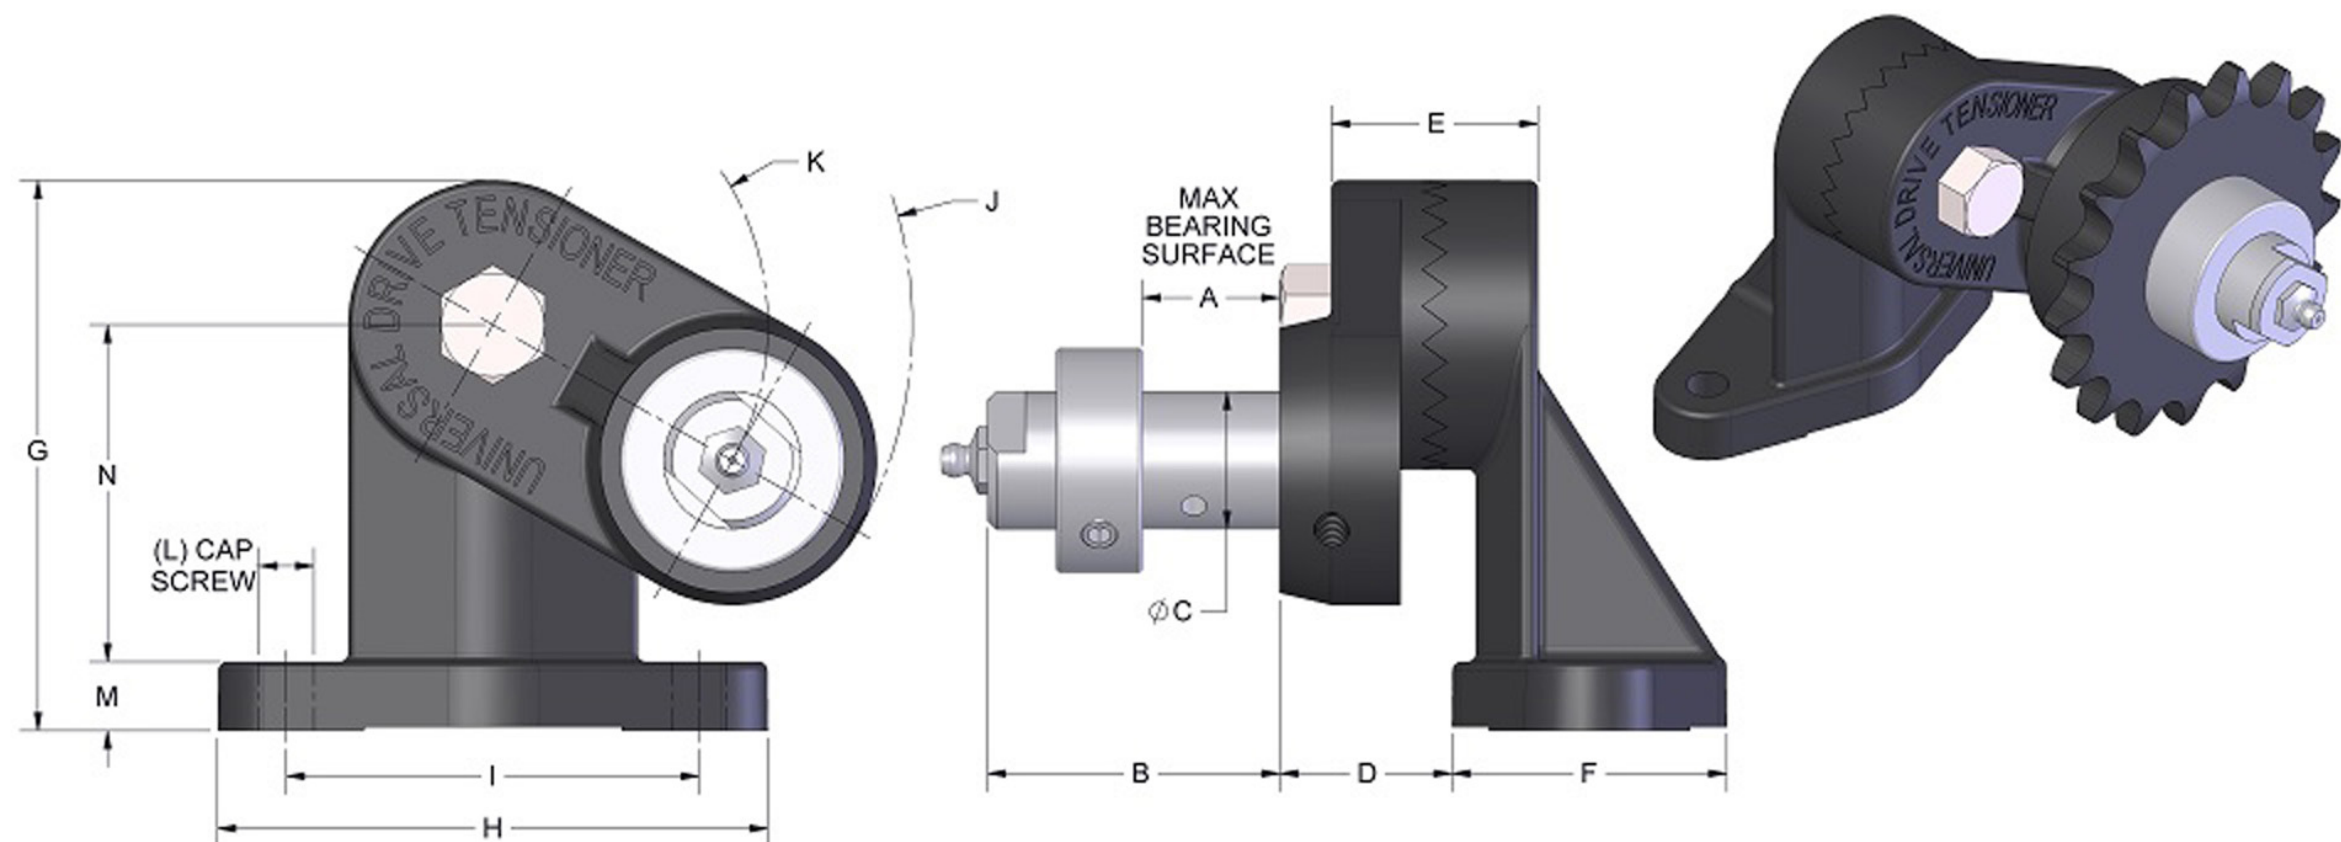

Model No.	Use with Shaft No.*	A	B	C	D	E	F	G	H	I	J	K	L	M	N	App. Wt.
RSM	SO2	1-1/2"	2-1/8"	1"	1-1/4"	1-1/2"	2"	4"	4"	3"	3"	2"	3/8"	1/2"	2-1/2"	3.00
	SO3	2-1/2"	3-1/8"													
	SO4	3-1/2"	4-1/8"													
RSM-3/4-10	NO2	1-1/2"	2-1/8"	1"	1-1/4"	1-1/2"	2"	4"	4"	3"	3"	2"	3/8"	1/2"	2-1/2"	3.00
	NO3	2-1/2"	3-1/8"													
	NO4	3-1/2"	4-1/8"													
RSL	SO5	3-1/4"	4"	1-1/2"	1-3/4"	2-3/8"	3-1/2"	7-3/8"	7-1/2"	6"	6-1/2"	5"	5/8"	3/4"	5-1/8"	14.00
	SO6	5-1/4"	6"													

*Idler shaft & set collar not included in tensioner unit. Must be ordered separately.