


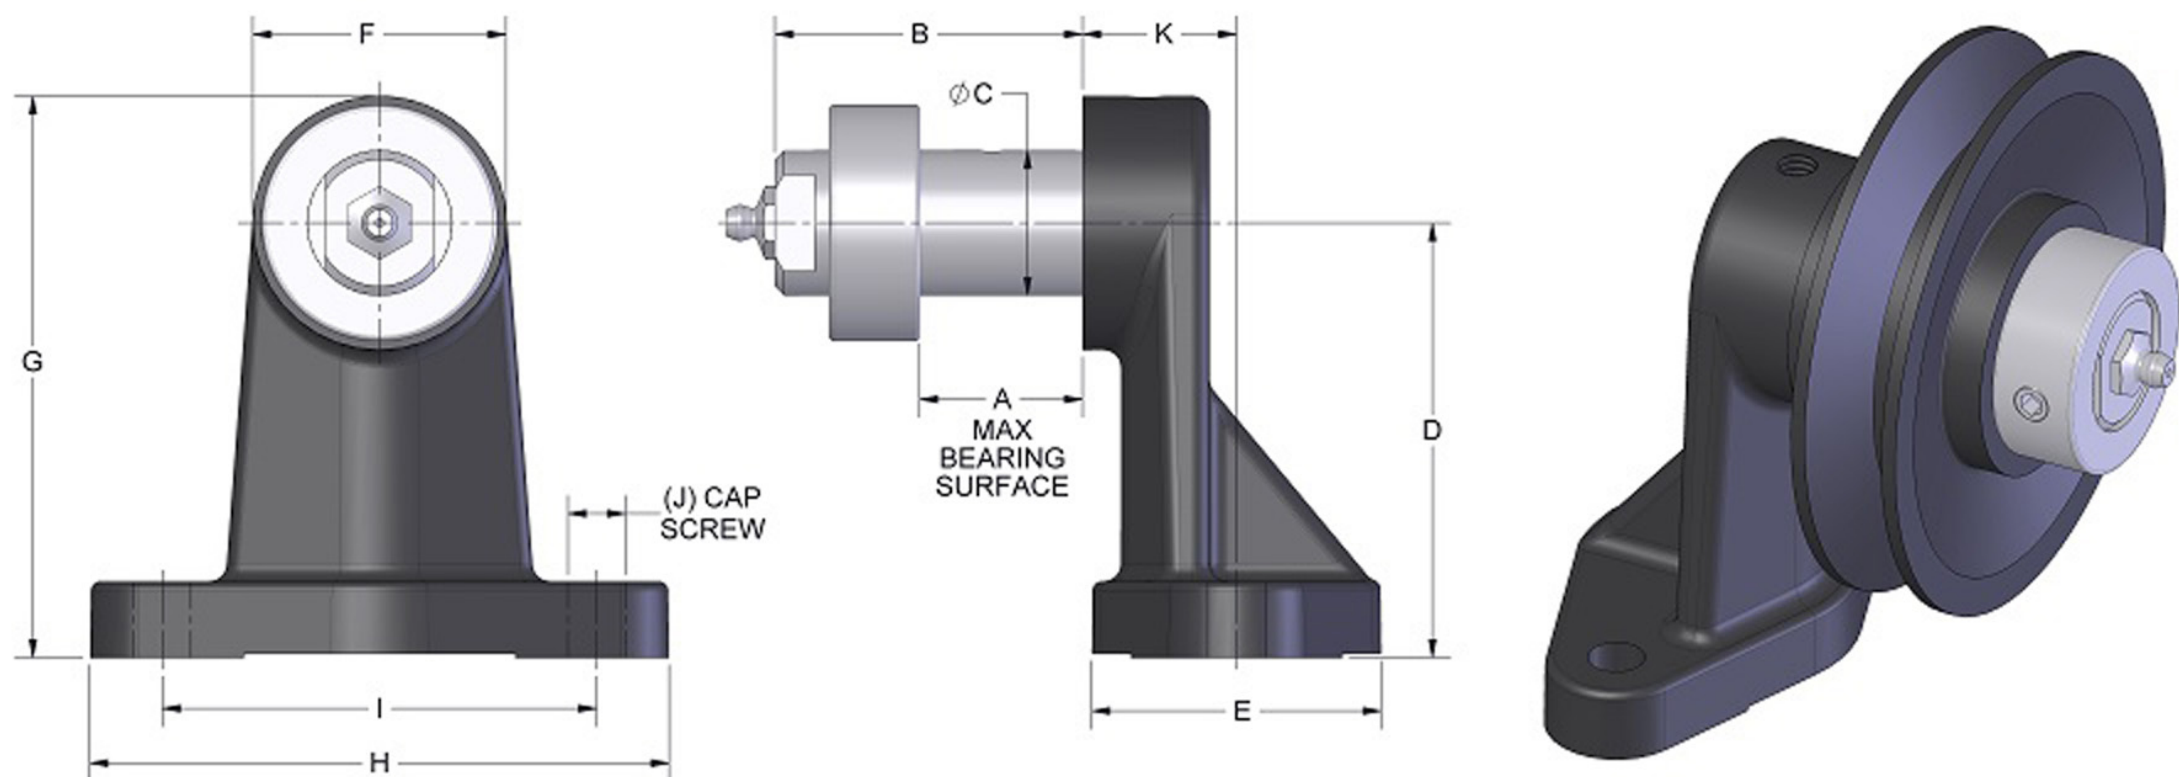

Model No.	Use with Shaft No.*	A	B	C	D	E	F	G	H	I	J	K	App. Wt.
RS	SO1	1-1/16"	1-1/2"	1/2"	1-1/2"	1-1/8"	1"	2"	2-3/8"	1-3/4"	1/4"	9/16"	.26
RM	SO2	1-1/2"	2-1/8"	1"	3"	2"	1-3/4"	3-7/8"	4"	3"	3/8"	1-1/16"	1.75
	SO3	2-1/2"	3-1/8"										
	SO4	3-1/2"	4-1/8"										
RM-3/4-10	NO2	1-1/2"	2-1/8"	1"	3"	2"	1-3/4"	3-7/8"	4"	3"	3/8"	1-1/16"	1.75
	NO3	2-1/2"	3-1/8"										
	NO4	3-1/2"	4-1/8"										
RL	SO5	3-1/4"	4"	1-1/2"	6"	3-1/2"	2-5/8"	7-5/16"	7-1/2"	6"	5/8"	1-7/8"	9.63
	SO6	5-1/4"	6"										

*Idler shaft & set collar not included in tensioner unit. Must be ordered separately.