


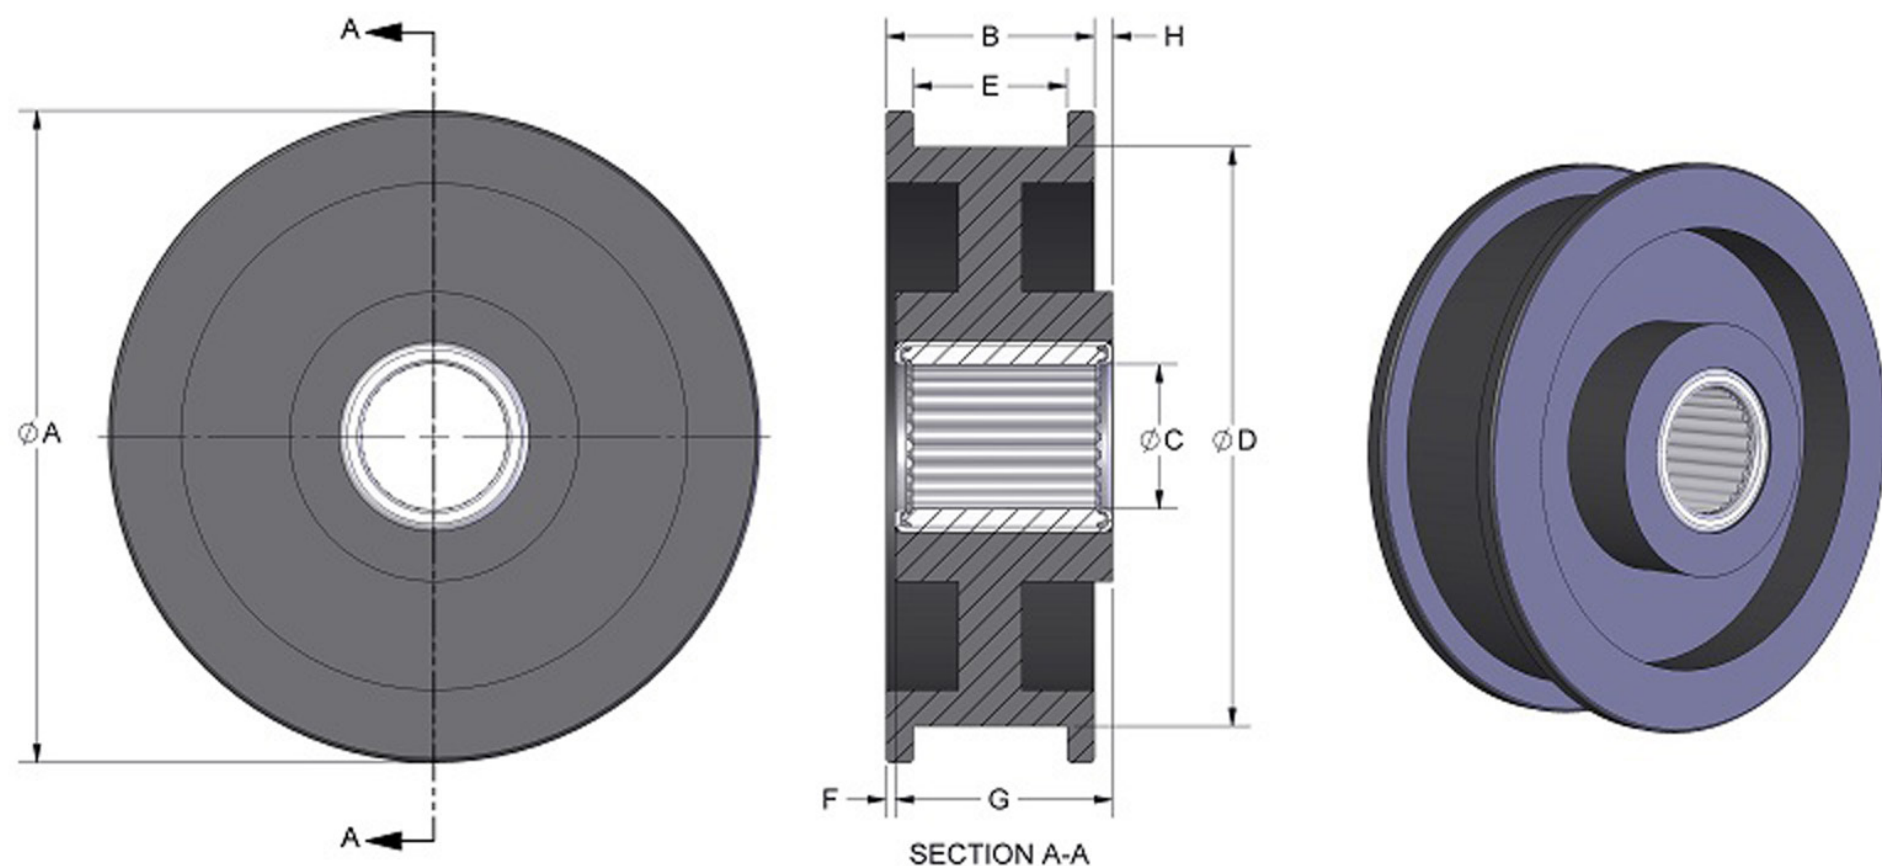

Part No. Bronze Bushing	Part No. Needle Bearing	A	B	C	D	E	F	G	H	For use with Idler Shaft No.	Bronze App. Wt.	Needle App. Wt.
P00	P00F	1-3/8"	5/8"	1/2"	1-1/8"	7/16"	--	5/8"	--	SO1	.25	.25
P0	P0F	1-3/4"	13/16"	1/2"	1-3/8"	9/16"	--	13/16"	--	SO1	.32	.31
PB	PBF	2-1/2"	7/8"	1"	2-1/4"	11/16"	--	7/8"	--	SO2	.45	.45
P1	P1F	4-1/2"	1-7/16"	1"	4"	1-1/16"	1/16"	1-1/2"	1/8"	SO2	3.12	3.00
P2	P2F	4-1/2"	2-7/16"	1"	4"	2-1/16"	1/16"	2-1/2"	1/8"	SO3	4.75	4.62
P3	P3F	4-1/2"	3-7/16"	1"	4"	3-1/16"	1/16"	3-1/2"	1/8"	SO4	6.00	5.75
--	P4F	7"	5"	1-1/2"	6"	4-1/2"	1-1/8"	4"	1/8"	SO6	--	12.37
--	P6F	7"	6-3/4"	1-1/2"	6"	6-1/4"	1-7/8"	5"	1/8"	SO6	--	17.25