




CI96


# Automatic Coupling Inserter

1.

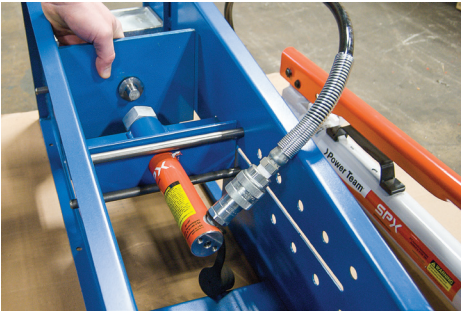

Insert the push plate into the hydraulic ram. Note: The push plate is easily detachable to provide additional room while positioning large hoses and stems.

2.

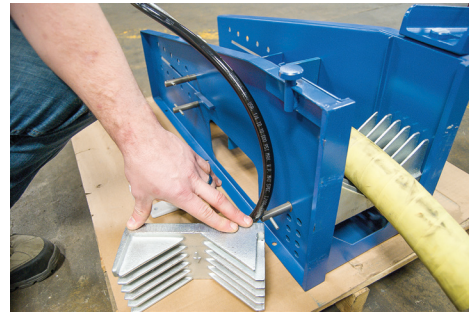

Position the bottom half of the hose jaw \* in the jaw guides such that the hose is in line with the center of the push plate. Secure the bottom half of the hose jaw.


\* Use CI93-11 jaws (standard) for hoses having an O.D. of 2 $\frac{3}{4}$ " to 7 $\frac{1}{4}$ ". Use CI9311SML jaws (optional) for hoses having an O.D. of 1" to 2 $\frac{3}{4}$ ".

3.



Lower the upper half of the hose jaw through the jaw guides onto the hose. Position the jaw adjustment plate above the top hose jaw.

4.

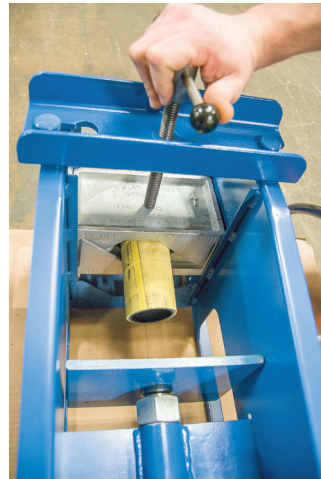

Adjust the hose through the jaw halves such that a sufficient length overhangs to accept the coupling. Turn the threaded spindle to tighten the jaws around the hose.

5.



Lubricate the inside of the hose end and/or the shank of the coupling with Dixon's lubricant (DCL-80). Insert the end of the coupling shank into the hose and position the hydraulic ram assembly behind the fitting. Secure the hydraulic ram assembly in place with the position pins.

6.





Close the pump valve and pump the ram forward until the coupling is fully inserted. Note: Make sure the fitting is aligned with hose during insertion. Open the pump valve for automatic ram return. Remove assembly.



**Caution:** Never place body parts directly in path of hydraulic ram while in operation, as injury may result.

# Coupling Inserter Parts Diagram

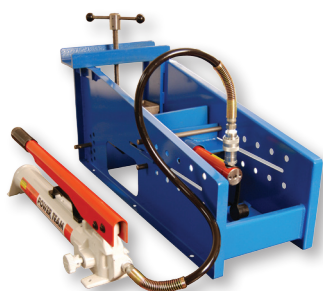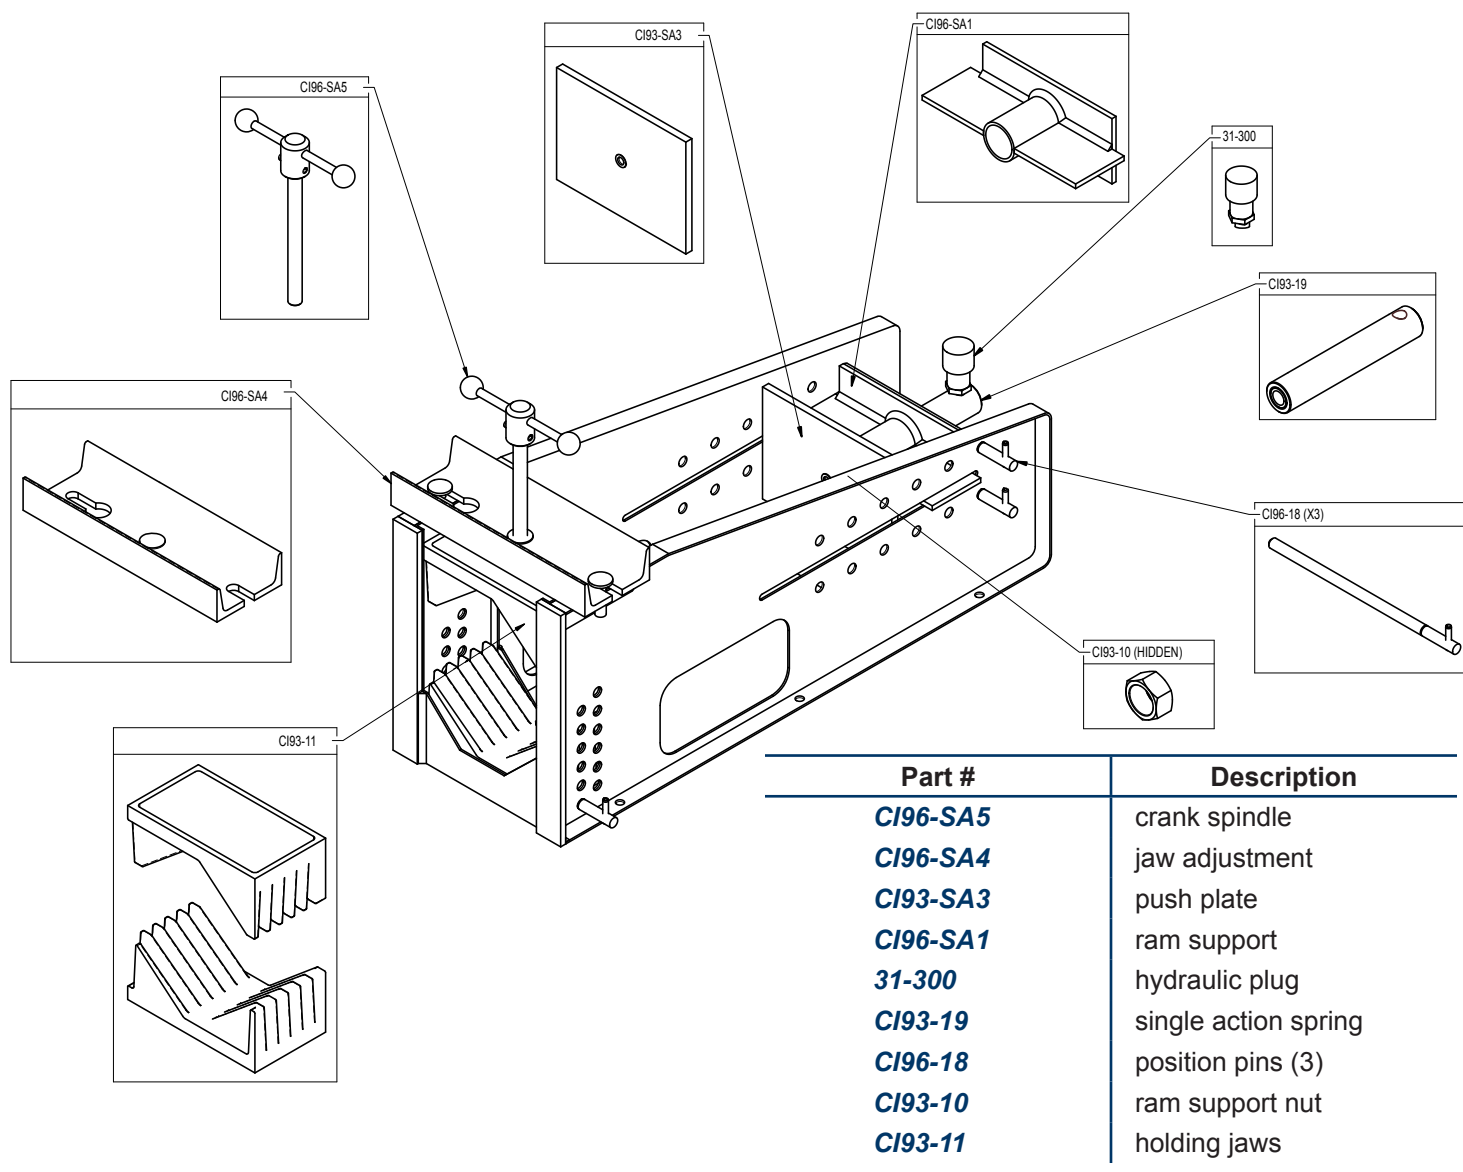

**CI96** (pictured above) - supplied with 10,000 PSI hand pump, 5 ton ram

**CI96AH** - supplied with 10,000 PSI air/hydraulic pump, 5 ton ram



Optional 10,000 PSI air/hydraulic pump

connect with us on



**Dixon**

ph 877.963.4966  
fx 800.283.4966  
sales@dixonvalve.com  
dixonvalve.com

scan to visit our website

