


Service Entrance Mast Heads

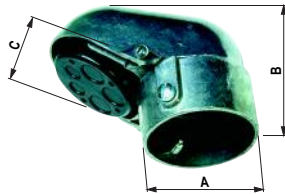

Use:

Service entrance caps are used as a connecting point in an overhead service entrance and can be mounted on threaded or unthreaded Rigid Conduit, IMC or EMT Conduit.

- Slip Fit
- Phenolic Insulator with Multiple Holes
- Listed for Use in Wet Locations

Materials

- Aluminum Die-Cast

Certification

UL E121487 SP LR57925

Standards

UL 514B CSA C22.2 No. 18
NEC Articles 345, 346 & 348


NM / SE CABLE

Catalog Number	UPC No 0-87115	Pipe Size	Head size	Nominal Dimensions			Pcs/ Unit	Ctn/Case Qty/Qty	Case Wt.
				A	B	C			

Boxed

9366	09366-0	2"	1 1/4"	2.66	3.72	3.14	-	4	3
9367	09367-7	2 1/2"	1 1/4"	3.28	4.05	3.08	-	2	2
9368	09368-4	2 1/2"	2"	3.12	4.57	4.20	-	2	2

Oval Service Cable Heads

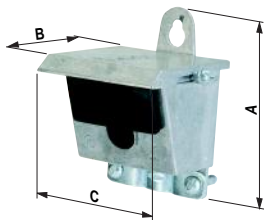

Use:

Die-cast oval service entrance caps are used as a connecting point in an overhead service entrance for SEU Cable.

- Removable Cap
- 2-Piece Phenolic Insulator
- Listed for Use in Wet Locations

Materials:

- Aluminum Die-Cast

Certification:

UL E155410 SP LR57925

Standards:

UL 514B
CSA C22.2 No. 18
NEMA FB-1
NEC Article 338

NM / SE CABLE

Catalog Number	UPC No 0-87115	Trade Size	Nominal Dimensions			Pcs/ Unit	Ctn/Case Qty/Qty	Case Wt.
			A	B	C			

Boxed

9364	09364-6	3#8-3#1	3.47	1.90	2.80	-	5	1.4
9365	09365-3	3#1/0-3#4/0	4.90	2.90	4.30	-	5	3.3