

# INSTALLATION INSTRUCTIONS



For more information contact...

## **WOODFORD MANUFACTURING COMPANY**

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115


To view our complete product line visit: [www.woodfordmfg.com](http://www.woodfordmfg.com) or email: [sales@woodfordmfg.com](mailto:sales@woodfordmfg.com)

A Division of WCM Industries, Inc.

## THERMALINE®

Rev 06/10 Form No. IITL.103

SEE INSTALLATION INSTRUCTIONS ON SIDE OF UNIT

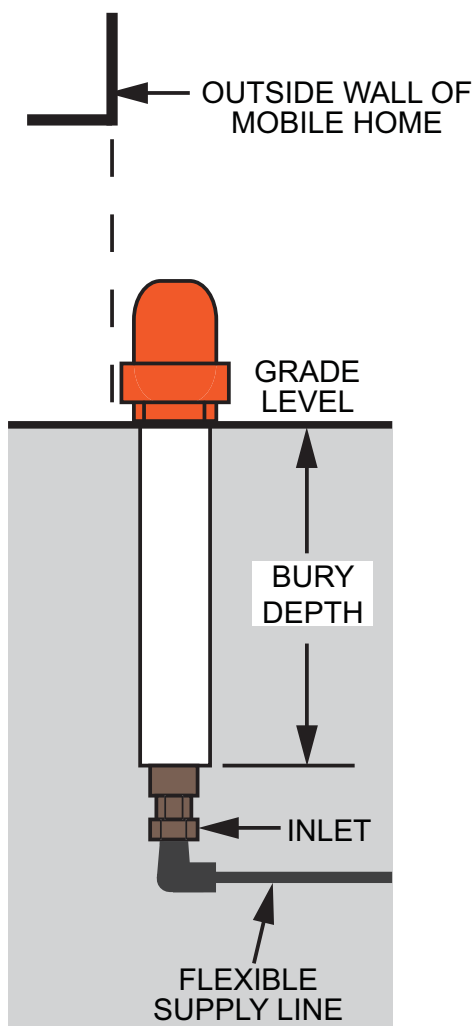

**WARNING:** Install THERMALINE beside rather than under mobile home to facilitate service of unit.

1. Install THERMALINE so that outlet is 4 inches above grade or to the specifications of the local plumbing code and so that the valve body is below all danger of frost.
2. Flush gravel, debris, etc. out of the supply line before connecting hydrant.
3. To protect the hydrant supply connection from ground heaving or settling, connect the THERMALINE to water supply pipe with brass fittings and a flexible supply line.
4. After installation, check all connections for leaks.
5. Follow winterizing instructions under THERMALINE cover when unit is not electrically heated or unit may freeze and burst.

*NOTE: Using the THERMALINE for an electrical ground is a violation of the NATIONAL ELECTRICAL CODE.*