

# INSTALLATION INSTRUCTIONS



For more information contact...

## **WOODFORD MANUFACTURING COMPANY**

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: [www.woodfordmfg.com](http://www.woodfordmfg.com) or email: [sales@woodfordmfg.com](mailto:sales@woodfordmfg.com)

A Division of WCM Industries, Inc.

Rev 06/10 Form No. II22.101

## Model 22 & V22

**HOT & COLD**

### Freezeless Wall Faucet




Model 22  
Anti-siphon protected




Model V22  
Anti-siphon protected


**FIGURE 1-22**

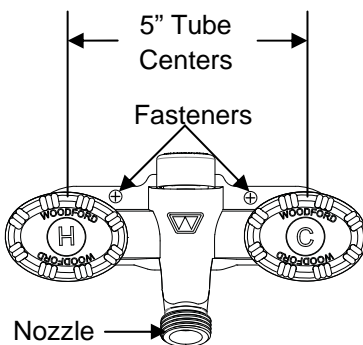


**FIGURE 2-22**

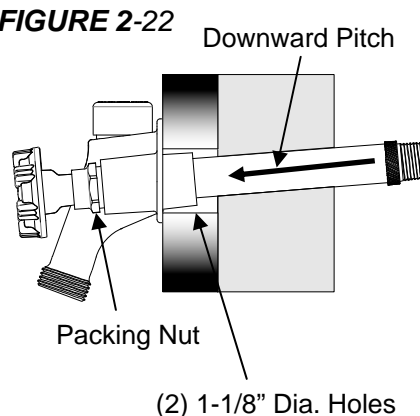

**FIGURE 1-V22**

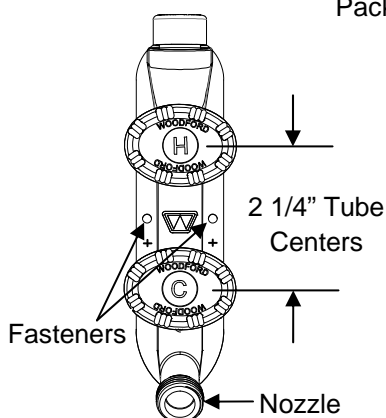

**FIGURE 2-V22**

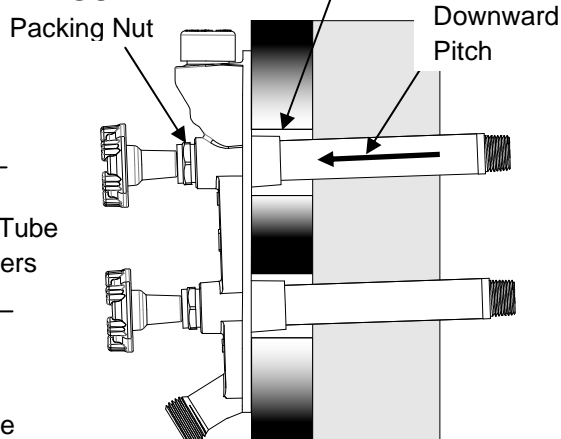

Wall faucets must be properly installed and operated to insure drainage. Improperly installed or operated wall faucets may freeze and burst in freezing weather.

#### INSTALLATION INSTRUCTIONS:

1. Before installation, flush supply line to remove any debris.
2. Drill (2) 1-1/8" diameter holes through the wall in the desired location and insert the faucet from the outside. **FIGURE 1**
  - a. Drill (2) holes for the horizontal mounted Model 22 water tubes on 5" centers.
  - b. Drill (2) holes for the vertical mounted Model V22 water tubes on 3 1/4" centers.
3. Install faucet with nozzle pointing down. **FIGURE 1**
4. The water tubes must have a slight downward pitch for proper drainage. *Proper drain angle is built in to the faucet head if mounted on a vertical surface.* **FIGURE 2**
5. Secure faucet to the wall using appropriate fasteners installed through the holes in the flange. **FIGURE 1**
6. *For a solder connection inlet*, open faucet to full open position before soldering. Excessive heat can damage valve seat rubber or stainless steel seat and factory solder joint.

**NOTE:** The packing nut, located behind the handle, has been factory adjusted. If leakage should occur after installation or use, the packing nut can be tightened to stop the leak.

**FIGURE 2**

# INSTALLATION INSTRUCTIONS



For more information contact...

## **WOODFORD MANUFACTURING COMPANY**

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

To view our complete product line visit: [www.woodfordmfg.com](http://www.woodfordmfg.com) or email: [sales@woodfordmfg.com](mailto:sales@woodfordmfg.com)


A Division of WCM Industries, Inc.

## **DRYWALL MOUNTING PLATE (DMP)**

### **FOR MODEL 22 & V22**

### **HOT & COLD WALL FAUCETS**

Rev 07/10  
Form No. IIDMP.101

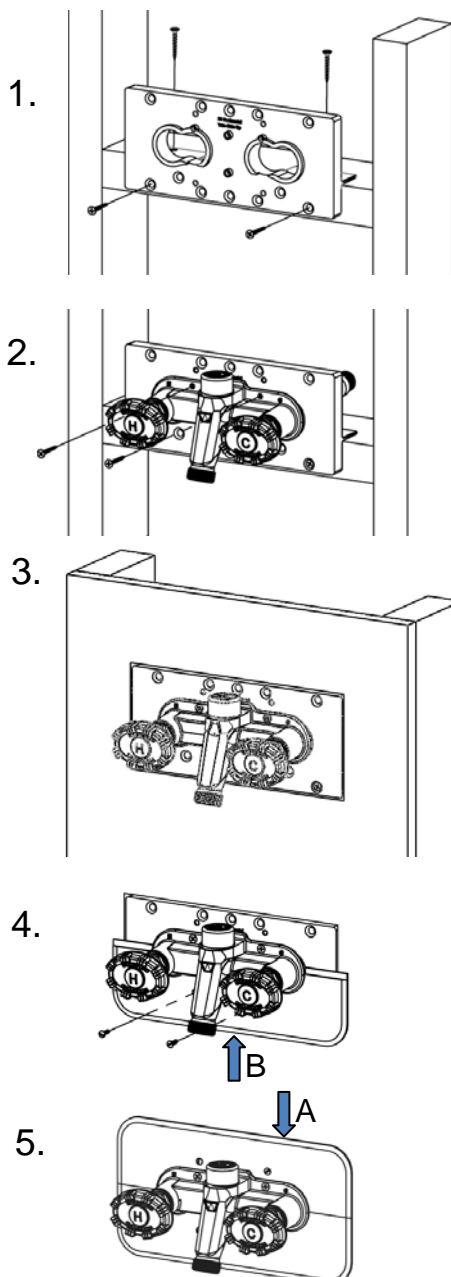

Preferred method for installing the Model 22 (horizontal mount) or V22 (vertical mount) on an interior drywall finished wall using the Woodford Drywall Mounting Plate.

1. Install the 4" x 9 1/4" Mounting Plate on the horizontal 2X4 or a vertical 2X4 and secure the rear screw flanges with deck screws. Holes are provided for additional screws if needed.
2. Install the Model 22 or V22 through holes in the Mounting Plate and secure with wood screws.
3. Cut and fit 5/8" drywall over the Mounting Plate. A maximum 1/4" gap all around is permissible. *Drywall finishing and/or painting is advisable at this time.*
4. Slide the Cover Plate B up and under the faucet flange of the 22, or from the right of the V22, until it stops and the mounting holes align. Install (2) furnished white headed screws to secure plate.
5. Slide the Cover Plate A down and under the faucet flange of the 22, or from the left of the V22, until it meets flush with the other Cover Plate. Install (2) furnished white headed screws to secure the plate.

