


## Scru-Band Kit Installation Instructions

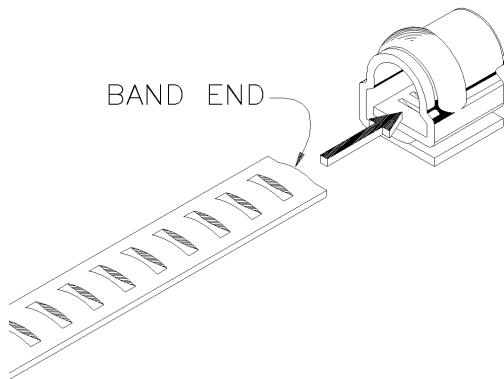


**Figure 1**

- A. Before cutting band, insert roll band end through housing front entrance (Figure 1). Pull band out through back (Figure 2). Allow ample band length.

Insert band end into side entrance of housing (Figure 2) forming an oversized diameter clamp. For best clamping results on large diameter clamps, allow approximately 1-1/4" band length past back of housing (Figure 2). (Less for smaller diameters).


Pull clamp diameter snug around object to be clamped. Insert screw into front entrance, tighten and cut off band (Figure 3).

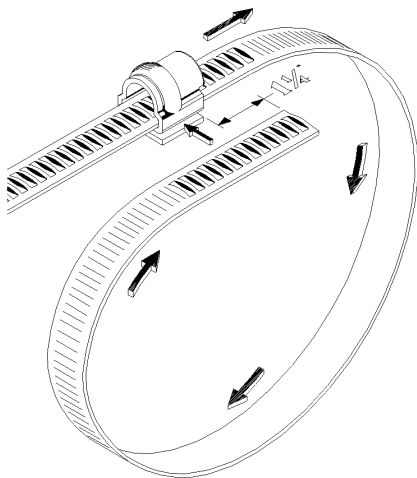

**Figure 2**

- B. On applications where it is desirable to minimize the length of band between housing and cut-off end (Figure 3), pull clamp diameter snug around object, mark band even with front entrance of housing, remove band and housing from object, cut band in marked location. Re-insert cut band end through back of housing, insert screw and tighten.

- C. On applications where the end of object to be clamped can't be reached (such as utility poles), add housing to the band as described above, wrap free end of band around object and follow step "A" to finish application.

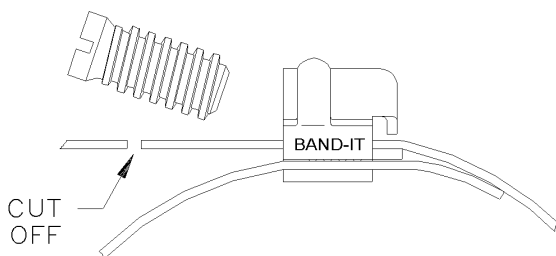

**Figure 3**