

Metallic & Non-Metallic DROP IN™ Floor Box Kits

4" round, UL Listed metallic and non-metallic floor box kits for existing floors. Designed for flush, neat installations. Quickly install with a SINGLE hole saw; cover sits just 1/8" off the floor.

FEATURES AND BENEFITS

- **Metal Covers** Available in brass or nickel-plated brass with two flip lids that keep water out and protect the box.
- **Non-Metallic Covers** Perfect for covering unused receptacles. To use the receptacle, simply remove the blank cover.
- Five decorator colors: dark brown, light almond, gray, caramel, black—each with a matching non-metallic mounting bracket/ring

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION	UNIT	STD PKG	DIM A	DIM B
FLB4360MB	00760	Round non-metallic box, Brass cover with flip lids	1	1	4.500	3.241
FLB4360NL	00761	Round non-metallic box, Nickel-plated brass cover with flip lids	1	1	4.500	3.241
FLB4362MB	09810	Round non-metallic box, Brass cover with threaded plugs	1	1	4.500	3.241
FLB4362NL	09812	Round non-metallic box, Nickel-plated brass cover with threaded plugs	1	1	4.500	3.241
FLOOR BOX KITS WITH NON-METALLIC BLANK COVERS						
FLB4360BL	00762	Round non-metallic kit with box and blank black cover	1	1	4.500	3.241
FLB4360BR	00763	Round non-metallic kit with box and blank dark brown cover	1	1	4.500	3.241
FLB4360CA	00764	Round non-metallic kit with box and blank caramel cover	1	1	4.500	3.241
FLB4360GY	00765	Round non-metallic kit with box and blank gray cover	1	1	4.500	3.241
FLB4360LA	00766	Round non-metallic kit with box and blank light almond cover	1	1	4.500	3.241



FLOOR BOX KITS INCLUDE...


Non-metallic box, round 4" diameter metal gasketed cover with flip lids, threaded plugs, or non-metallic gasketed cover blank, non-metallic gasket support plate, gasket, UL listed 15 amp TR duplex receptacle, mounting bracket, NM94 and NM95 cable connectors, (3) #8 x 1/2" flathead screws and (1) #6 x 1/2" screw.



COVER COLORS
Dark Brown,
Light Almond, Gray,
Caramel, Black

Suffix 'GC' added for ground clip (Canada).

PATENT PENDING.

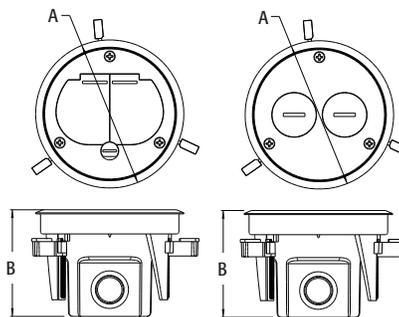

Scan For Video



INSTALLATION INSTRUCTIONS



1. Determine box location, taking care to avoid structural framing members. Using hole saw cut 4-1/4" diameter opening through floor and sub floor.
2. Insert mounting bracket. Using indicator marks, align bracket for proper receptacle orientation. Tighten (3) wing screws to secure bracket to floor.
3. Pull cable. Install in box with supplied cable connector. Attach box to bracket with (3) #8 x 1/2" sheet metal screws (supplied) through the U-shaped cut outs in the box flange.
4. Wire receptacle. Install in box. Attach supplied gasket support plate to receptacle with #6 x 1/2" screws.

Cover Installation

5. Install gasket. Attach cover to box with (3) #8 1/2" flathead machine screws.



FLB4360MB



FLB4360NL