

# 1485 / 1487 - SERIES


**BUL10147**

REV. C

ASSEMBLY INSTRUCTIONS

**ASSEMBLY INSTRUCTIONS FOR DROP HANGER AND BRACKET HANGERS (NOT SHOWN) TO WIREWAY FITTINGS**


- A) OPEN THE LIDS ON THE TWO MATING WIREWAY FITTINGS BEFORE ASSEMBLY.
- B) JOIN THE WIREWAY FITTINGS ON THE LID SIDE OF THE WIREWAY USING THE SOLID FLANGE GASKET AND THE 1/4 - 20 X 3/4 BOLTS AND NUTS (PARTS 2 & 3) INCLUDED WITH THE WIREWAY.
- C) JOIN THE WIREWAY FITTINGS ON THE OPPOSITE SIDE OF THE LID USING 1/4 - 20 X 1.5 BOLTS AND NUTS (PARTS 2 & 4). DOUBLE NUT THESE BOLTS.
- D) FASTEN THE DROP HANGER / HANGER BRACKET (PART 1) TO THE BOLTS WITH THE DOUBLE NUTS USING 1/4 - 20 KEP NUTS (PART 2).
- E) ATTACH THE SNAP ON SEALING PLATE AND CLOSE THE LIDS. SEE DETAIL BELOW.

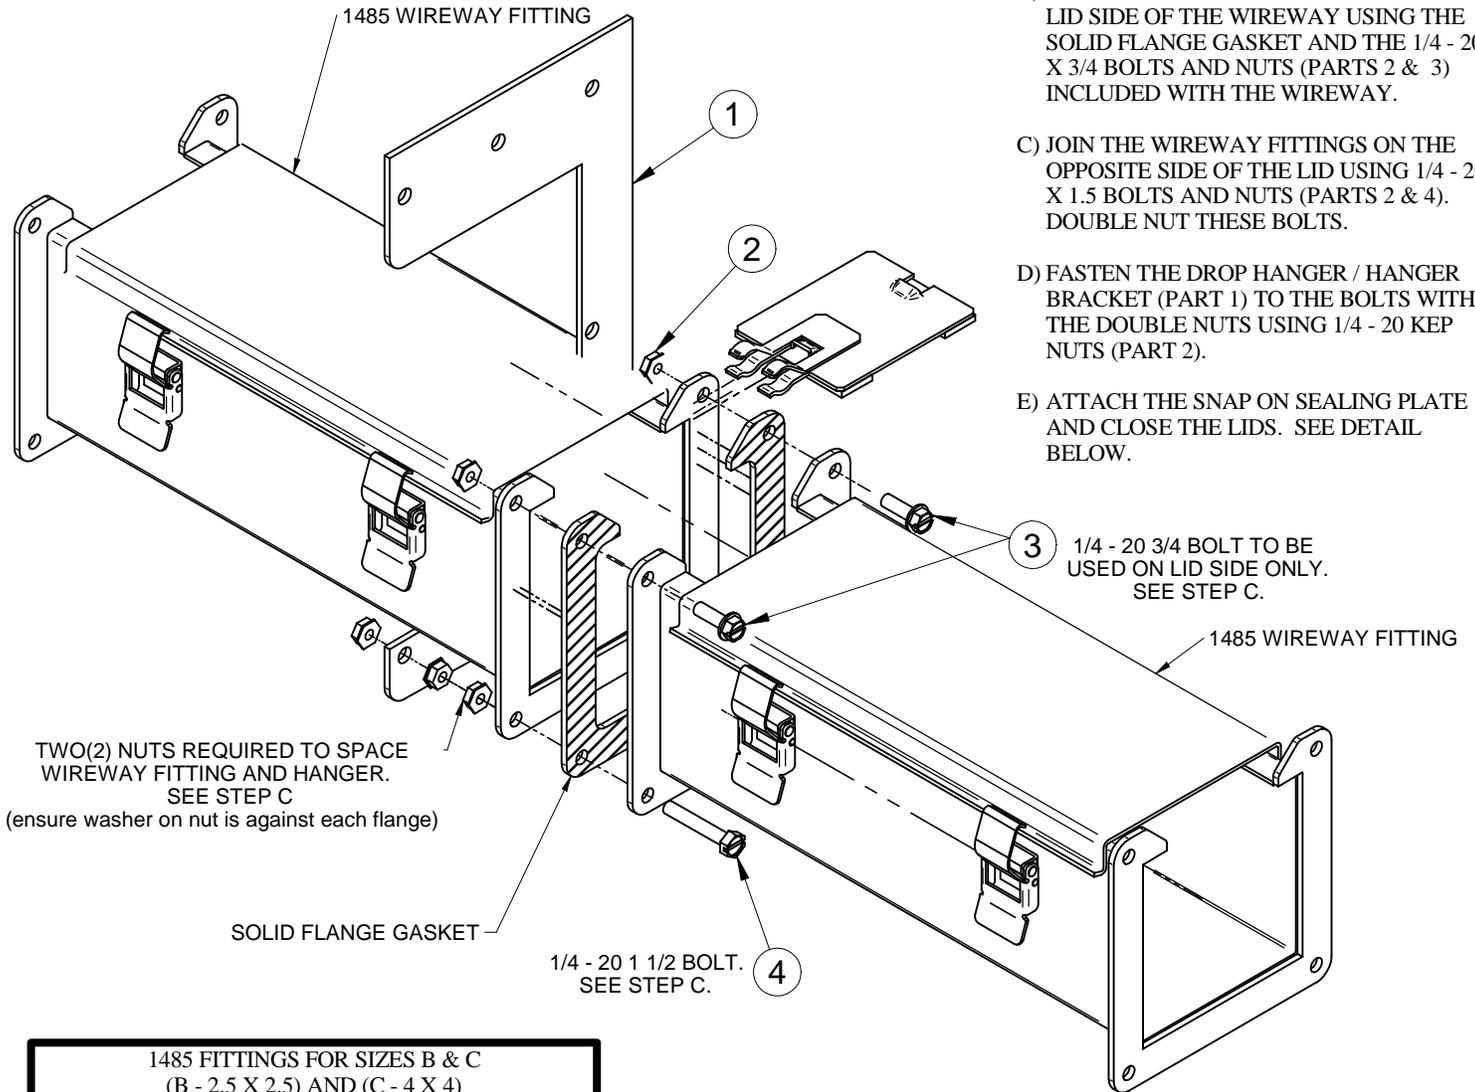


1485 FITTINGS FOR SIZES B & C (B - 2.5 X 2.5) AND (C - 4 X 4)		
PART #	QTY	DESCRIPTION
1	1	DROP HANGER (BRACKET HANGER)
2	6	1/4 - 20 NUT
3	2	1/4 - 20 X 3/4 BOLT W/ NUT
4	2	1/4 - 20 X 1.5 BOLT W/ SEMS WASHERS

1485 FITTINGS FOR SIZES D & E (D - 6 X 6) AND (E - 8 X 8)		
PART #	QTY	DESCRIPTION
1	1	DROP HANGER (BRACKET HANGER)
2	12	1/4 - 20 NUT
3	3	1/4 - 20 X 3/4 BOLT W/ NUT
4	4	1/4 - 20 X 1.5 BOLT W/ SEMS WASHERS

NOTE: HARDWARE INCLUDED WITH FITTINGS

 <p>TOOL BOX</p>	 <p>3/8, 7/16" Socket Wrench or Driver</p>	 <p>3/8, 7/16" Open End Wrench</p>
---	---	---

SNAP ON SEALING PLATE SNAPS ON OVER 1/4 - 20 HARDWARE WHILE DOORS ARE OPEN. SEALING PLATE IS SUPPLIED WITH THE WIREWAY. SEE STEP E.

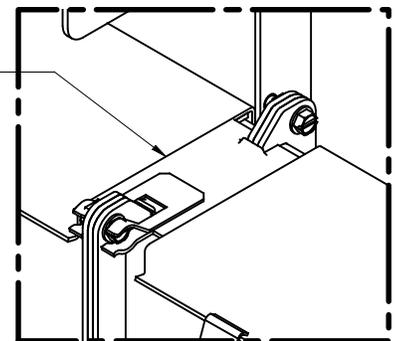

ASSEMBLED VIEW SHOWING SEALING PLATE

NOTE:  
ASSEMBLY OF 1487 WIREWAY IS ON PAGE 2




# 1485 / 1487 - SERIES

BUL10147

REV. C


## ASSEMBLY INSTRUCTIONS FOR DROP HANGER AND BRACKET HANGERS (NOT SHOWN) TO WIREWAY FITTINGS

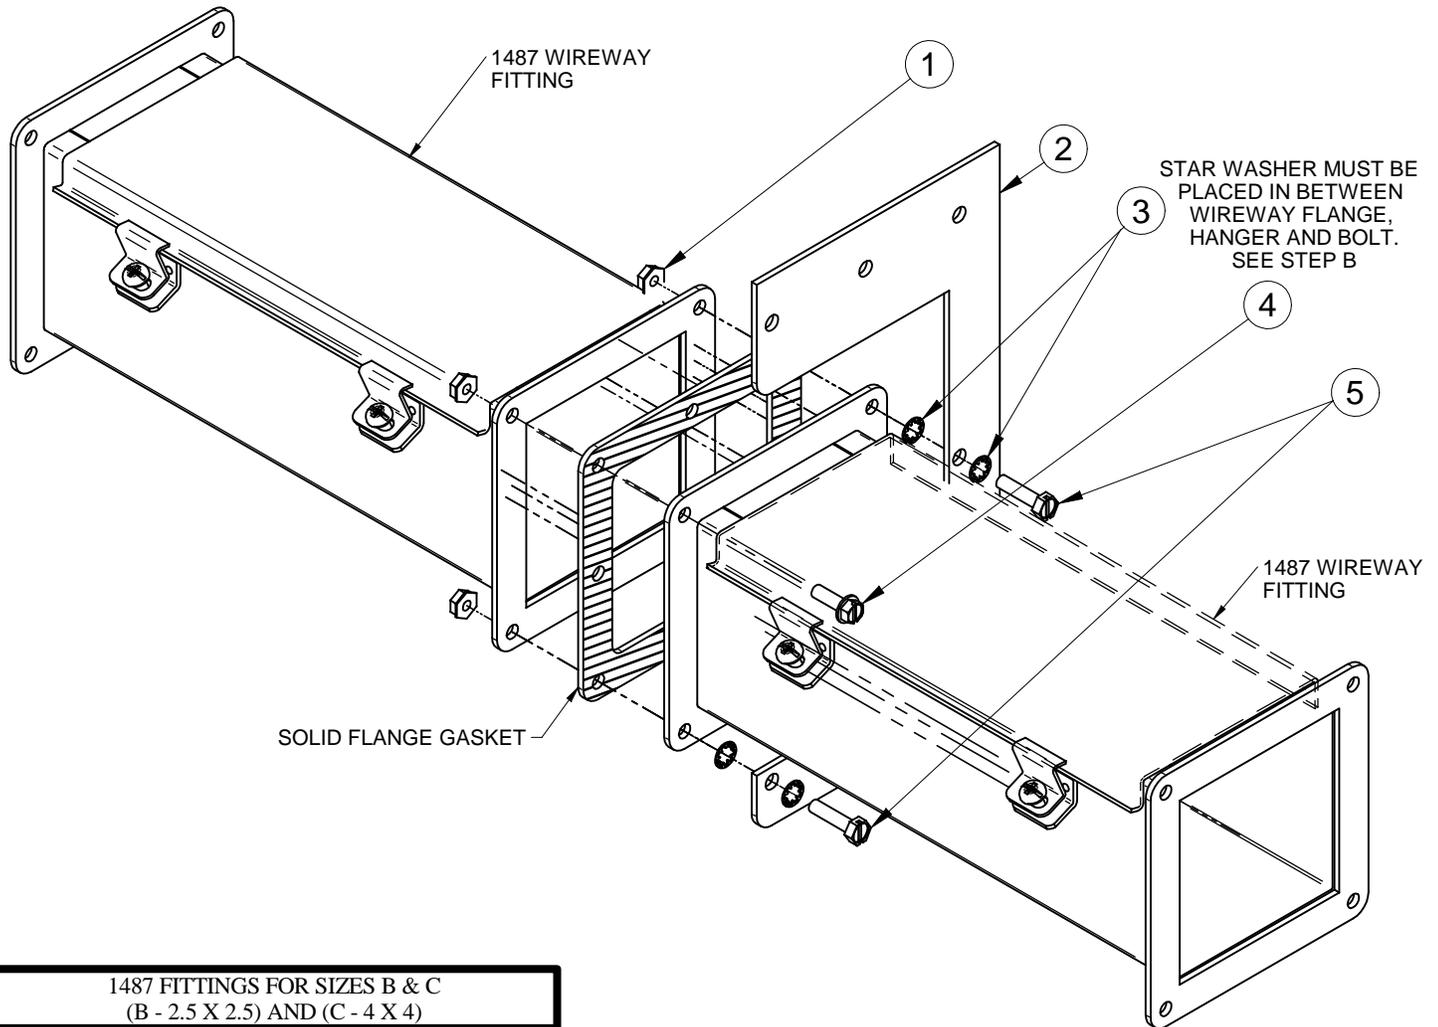

STAR WASHER MUST BE PLACED IN BETWEEN WIREWAY FLANGE, HANGER AND BOLT. SEE STEP B

1487 FITTINGS FOR SIZES B & C (B - 2.5 X 2.5) AND (C - 4 X 4)		
PART #	QTY	DESCRIPTION
1	3	1/4 - 20 NUT
2	1	DROP HANGER (BRACKET HANGER)
3	6	STAR WASHER
4	1	1/4 - 20 X 3/4 BOLT W/ NUT
5	3	1/4 - 20 X 1 BOLT W/ SEMS WASHERS

1487 FITTINGS FOR SIZES B & C (C - 6 X 6) AND (D - 8 X 8)		
PART #	QTY	DESCRIPTION
1	5	1/4 - 20 NUT
2	1	DROP HANGER (BRACKET HANGER)
3	10	STAR WASHER
4	3	1/4 - 20 X 3/4 BOLT W/ NUT
5	5	1/4 - 20 X 1 BOLT W/ SEMS WASHERS

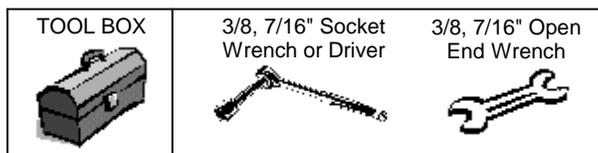

### ASSEMBLY INSTRUCTIONS

A) JOIN THE WIREWAY FITTINGS AS SHOWN USING THE SOLID FLANGE GASKET AND THE 1/4 - 20 X 3/4 BOLTS AND NUTS (PARTS 1 & 4) INCLUDED WITH THE WIREWAY.

B) FASTEN THE DROP HANGER / HANGER BRACKET (PART 2) TO THE WIREWAY FITTINGS AS SHOWN USING 1/2 - 20 X 1 BOLTS, WASHERS AND NUTS (PARTS 1, 3 & 5). STAR WASHERS MUST BE PLACED IN BETWEEN WIREWAY FLANGE, HANGER AND BOLT AS SHOWN.

**HAMMOND**  
**MANUFACTURING™**  
**ENCLOSURES**