



Rear view shown for clarity

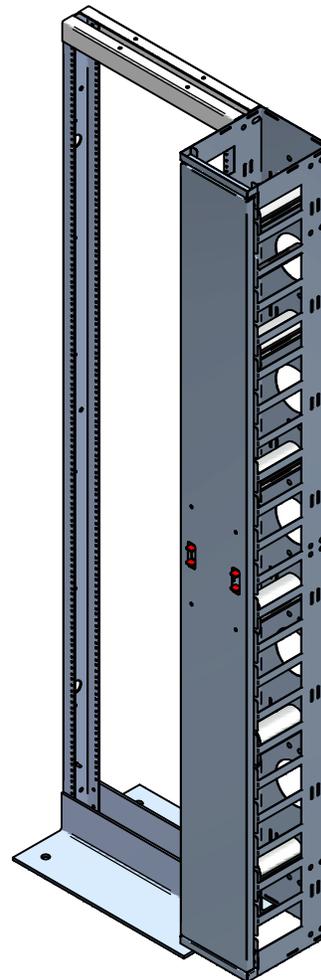

Relay Rack & Cable Manager Assembled

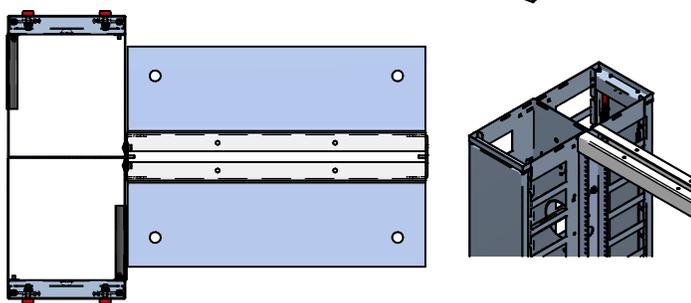

MOUNTED BACK TO BACK

### ASSEMBLY INSTRUCTIONS

A) Line up the back of the cable manager with the back for the relay rack, then lift the cable manager so it is flush with the top of the relay rack. (3 sets of holes should now line up)

B) Using the hardware supplied, insert the two carriage bolts through the cable manager and relay rack at the top then fasten loosely using washer and nut.

C) Insert the remaining hardware at four other points, (center and bottom), fasten loosely.

D) Ensure that the cable manager is sitting square into place then tighten all bolts.

\* For use with RB-2PA relay rack series.

### PARTS LIST

ITEM No.	DESCRIPTION	QTY
1	CABLE MANAGER	1
2	SCREW 1/4-20 X 1/2 CARRIAGE	6
2	SCREW 1/4-20 X 1/2 ROUND HEAD *	6
3	NUT 1/4-20 KEP	6
4	WASHER FLAT 1/4" ZP	6
5	CABLE PROTECTORS (Shpd Loose)	42

TOOLBOX



Phillips  
Screw Driver



7/16 Socket  
Driver



### CABLE PROTECTOR INSTALLTION


The cable manager door is capable of swinging both left and right.

#### Opening the door


- Squeeze one side of the coloured lock rods together and swing the door.

#### Closing the door

- Squeeze the two coloured lock rods together again and move the door to the closed position. Ensure that it is seated properly. If the door is not seated properly, you will see an indication on the holes above and below the lock rods. A properly seated door will be flush and the holes in the door will line up with the hole in the coloured lock rods.

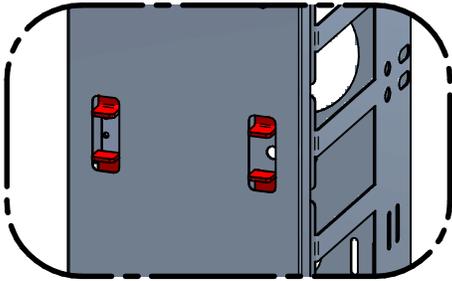

DETAIL A

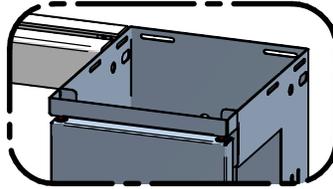

DETAIL B

#### Uninstalling the door

- Push down on both the top left and right lock rods and tilt the door forwards so that the lock rods are no longer aligned with the holes at the top of the cable manager (see DETAIL B). Lift the door up and out of the cable manager.

#### Reinstalling the door

- Lift the door and align the two ends of the lock rods with the holes at the bottom of the cable manager. Push down on both the top right and left lock rods and tilt the door into position. Release the lock rods and ensure the door is properly aligned. Check that it is flush and check the indicator holes.

#### Installing plastic clip on Cable Protectors

- Align bottom groove of cable protector with edge of cable manager and push in to lock into position. (See Below) Check that it is secure into place.

