

# LAY IN WIREWAY

BUL10299


REV. C

## ASSEMBLY INSTRUCTIONS FOR LAY IN WIREWAY CONNECTION/MOUNTING

### INSTRUCTIONS :

- A) LOCATE AND MOUNT HANGER BRACKETS IN DESIRED LOCATION (MUST BE LOCATED AT JOINTS, MAXIMUM 10 FEET APART).
- B) USING PROVIDED HARDWARE FASTEN JOINER ONTO FIRST STRAIGHT SECTION.
- C) ATTACH FIRST SECTION TO HANGER BRACKETS USING SUPPLIED HARDWARE. ENSURE THAT FASTENER IS SECURED BY THE NUT FROM THE UNDERSIDE OF THE WIREWAY.
- D) SLIGHTLY SECURE FASTENERS ONTO JOINER TO ACCEPT SECOND STRAIGHT SECTION.
- E) ATTACH SECOND SECTION TO JOINER, AND TIGHTEN FASTENERS.
- E) FASTEN HANGER BRACKET TO SECTION JOINTS.
- F) SECURE COVER USING SUPPLIED LOCK-OUT SCREWS.
- G) REPEAT STEPS A-E FOR ADDITIONAL SECTIONS, OR FITTINGS.

ITEM #	DESCRIPTION
1	NUT 1/4-20 KEP ZP
2	1/4-20 X 1/2 HEX SLOT BOLT
3	SCREW 1/4-20 X 1/2 CARRIAGE BOLT ZP
4	LAY IN WIREWAY - CEILING HANGER
5*	LAY IN WIREWAY - JOINER

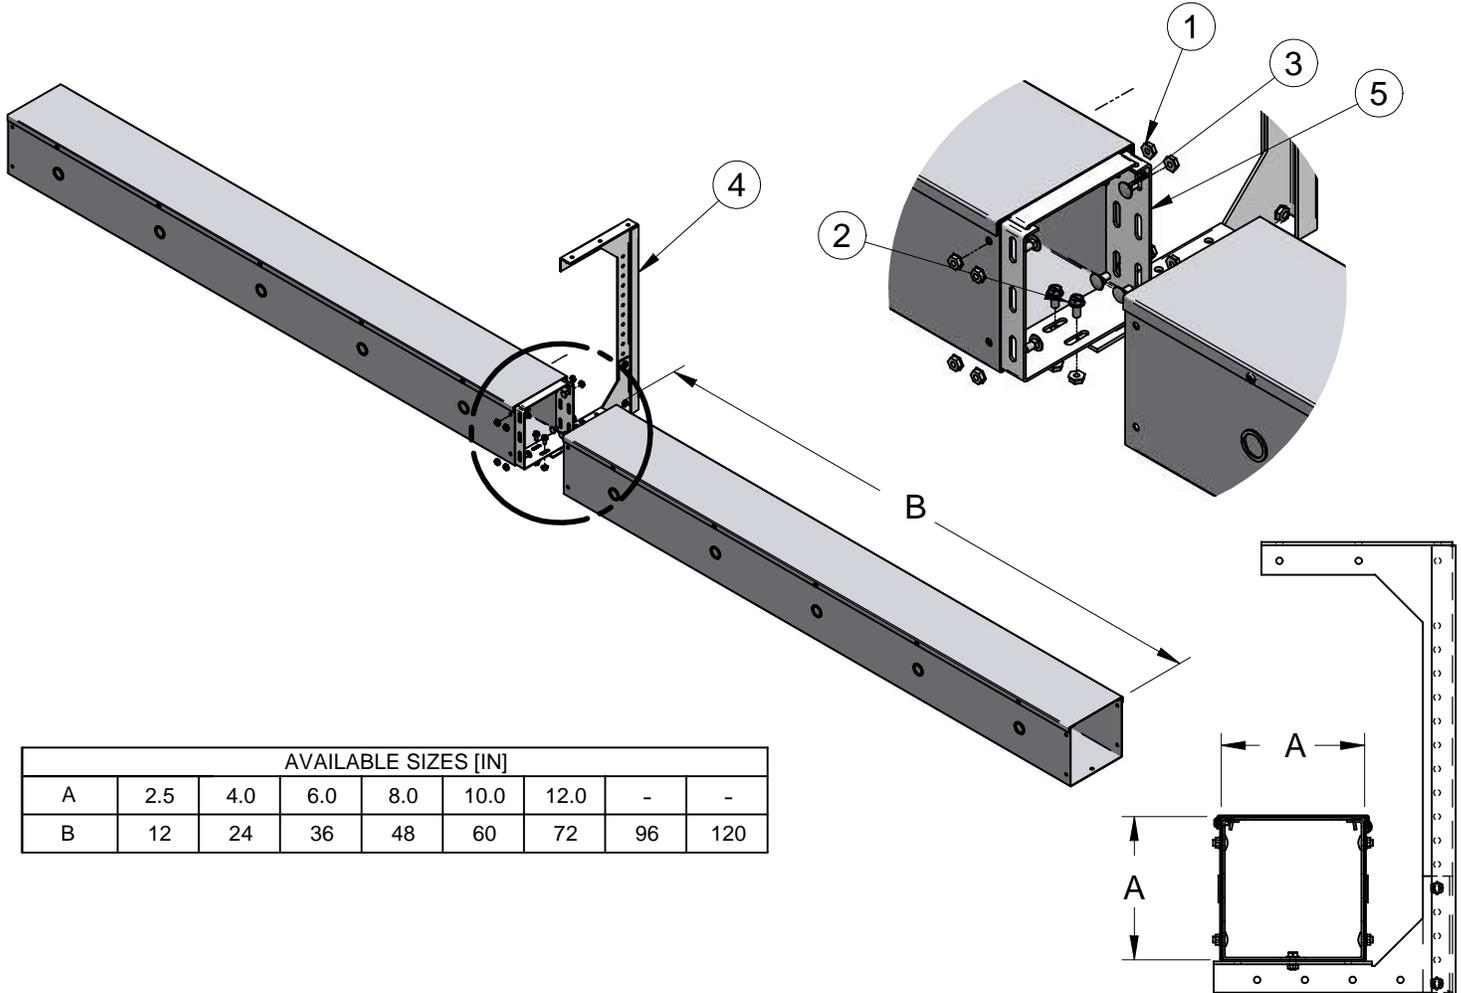

AVAILABLE SIZES [IN]								
A	2.5	4.0	6.0	8.0	10.0	12.0	-	-
B	12	24	36	48	60	72	96	120

