




Structured Media® Enclosure for Concrete Applications 48605-XXX

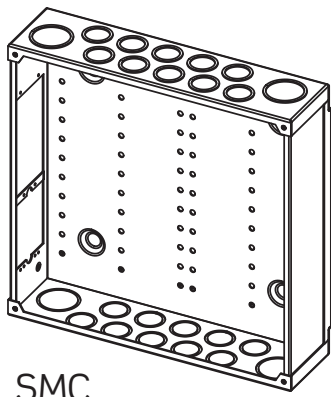


Tools required

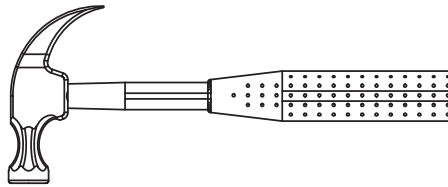


Hammer




Screwdriver

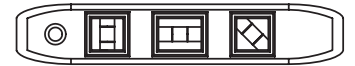


Level

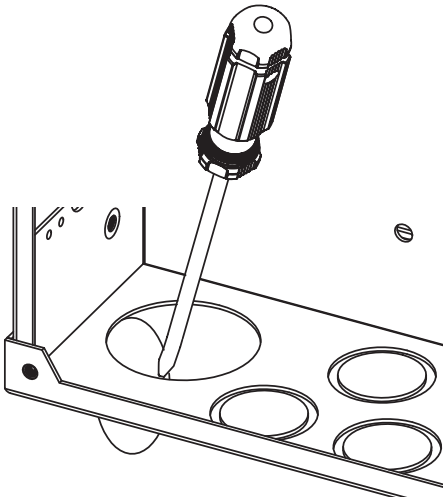


1. Remove knockouts
as required.

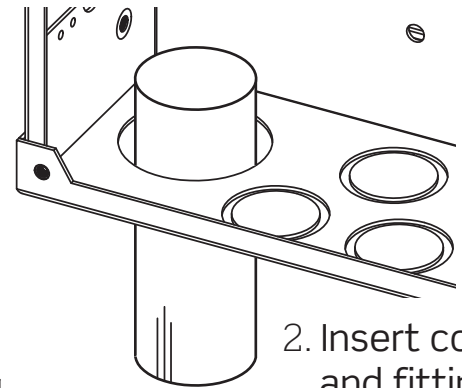

2. Insert conduit
and fittings.

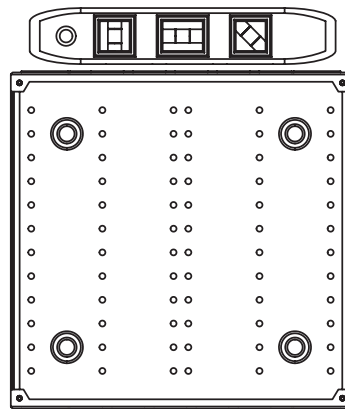

Keep SMC level.

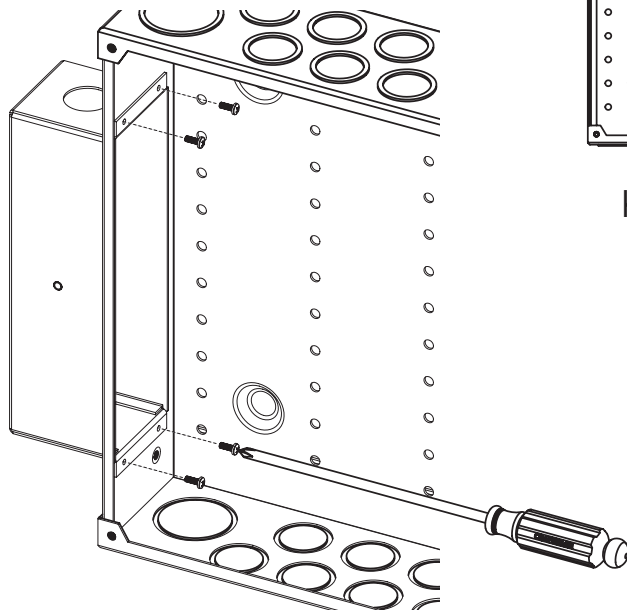

3. Install power box.

4. Assure tight seal
against form, to
prevent concrete
infiltration.

