



Fixed Transom Installation Supplement for Shower Enclosures

Fully install the main shower enclosure before installing the transom


1. Run a bead of silicone caulk on top of the already installed enclosure's header
2. Locate the curb of the transom as shown

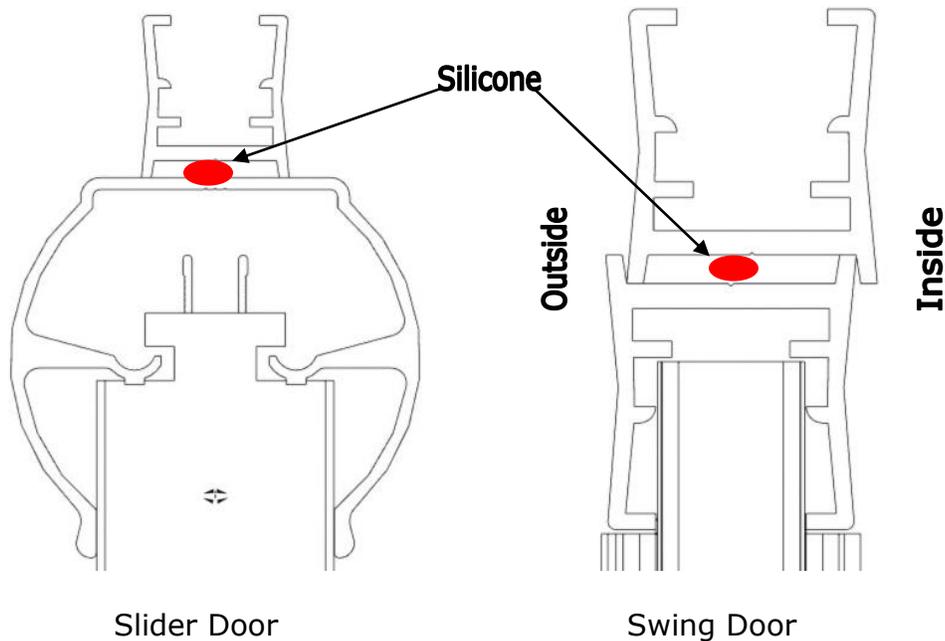

3. Install wall jambs on both sides of the transom. Drill holes and use wall plugs as during enclosure installation. Be sure to seat the wall jamb down in the curb
4. Place 2 setting blocks in the curb
5. Carefully slide the glass panel into 1 wall jamb then the other and lower into the curb onto the setting blocks installed in step 4
6. Snap the 2-piece header in place

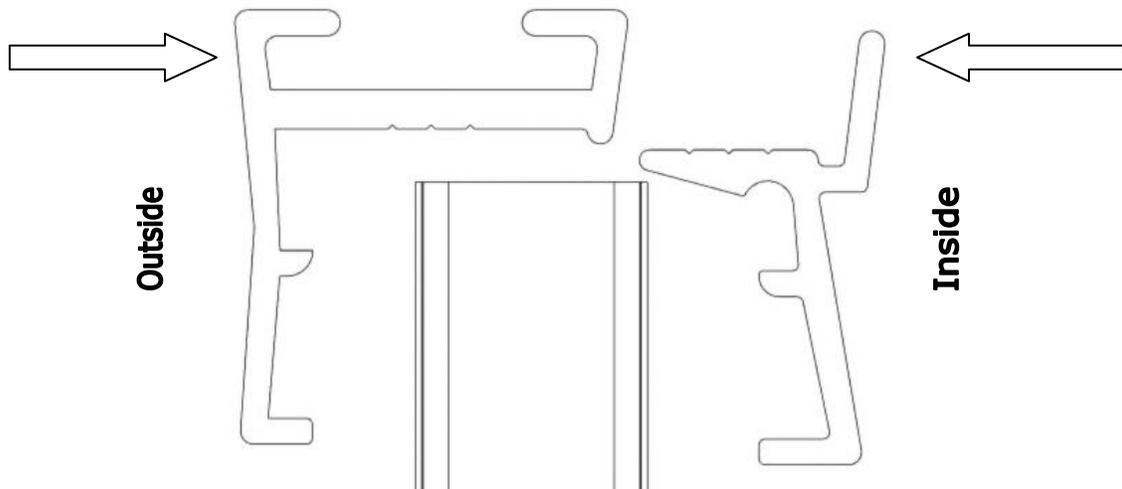

7. Install glazing vinyls at the bottom and top inside and outside
8. Install glazing vinyls at the sides inside and outside

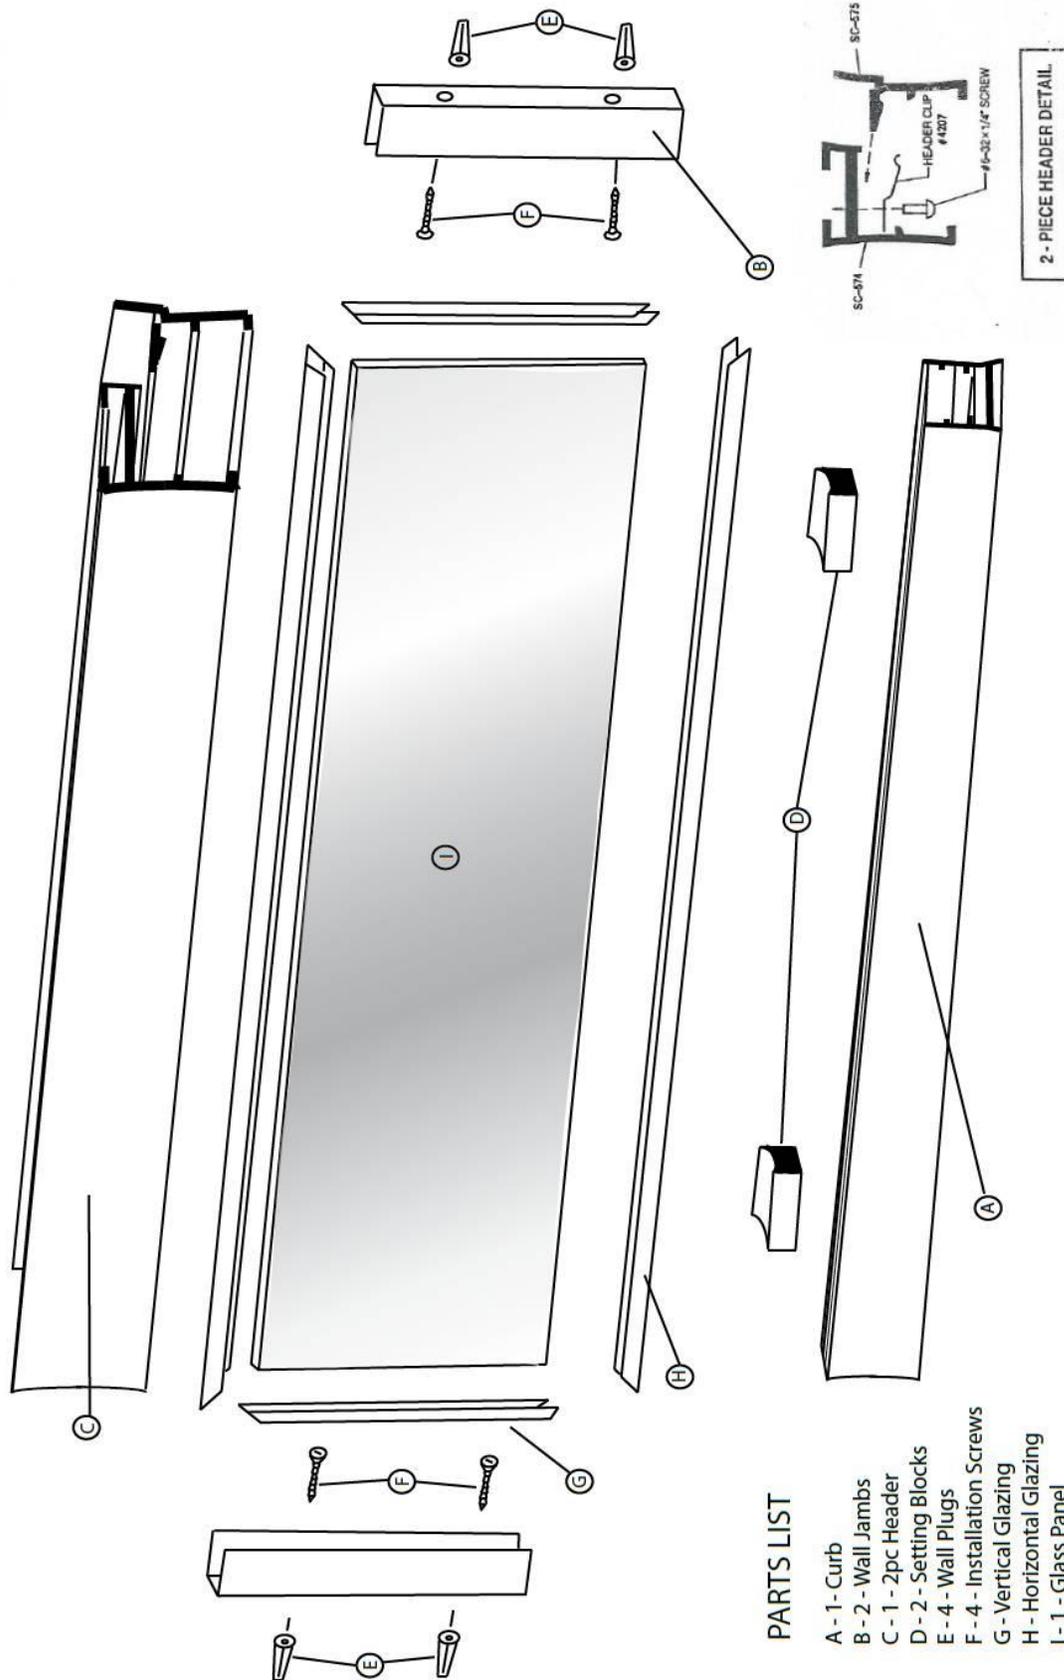

PARTS LIST

- A - 1 - Curb
- B - 2 - Wall Jamb
- C - 1 - 2pc Header
- D - 2 - Setting Blocks
- E - 4 - Wall Plugs
- F - 4 - Installation Screws
- G - Vertical Glazing
- H - Horizontal Glazing
- I - 1 - Glass Panel