




CG Series Fittings **IF 1099**

Installation & Maintenance Information

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

1. Install in body securely in conduit hub; or fasten securely in knockout with locknut.
2. Slide gland nut and bushing over cable, in that order.
3. Install cable through body far enough to allow for necessary wiring connections.
4. Install bushing in body, attach gland nut to body and tighten securely to cause bushing to grip cable firmly.

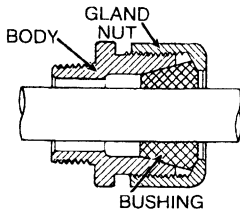

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.



Crouse-Hinds

Quality from
Cooper Industries

Cooper Industries Inc.
Crouse-Hinds Division
PO Box 4999
Syracuse, New York 13221 • U.S.A.
Copyright© 1996, Cooper Industries, Inc.

IF 1099
Revised 6/96
Supersedes 2/86