

## Strong Arm<sup>®</sup> with Shower WallNut Lock Blocks<sup>®</sup>


**Instruction Sheet** 

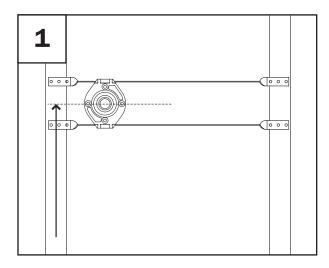


Determine stub out height.

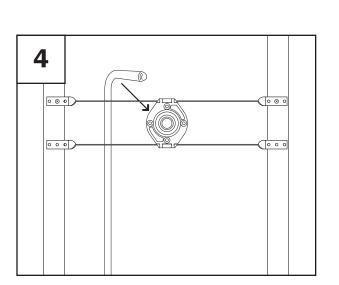


Insert copper shower riser ell into Lock Block.

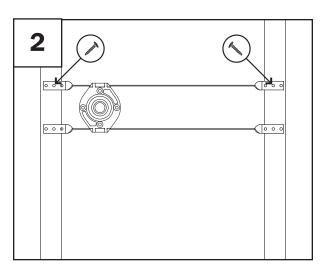


Secure top bracket to face of stud bay at desired position for shower arm stub out.

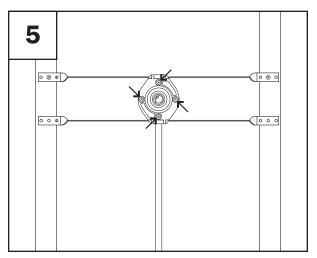


Install screws into all four screw holes and tighten. Block will compress around copper and on brackets to prevent lateral movement.

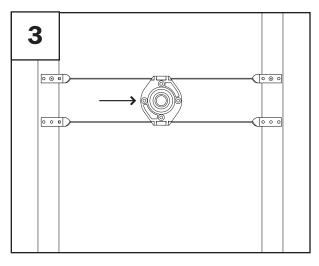


Slide Lock Block across bracket.

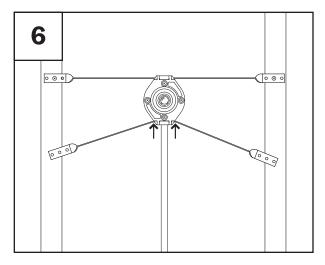

As close as possible to each side of block, bend the bottom bracket downward. Bending the bottom bracket provides the most rigid installation.

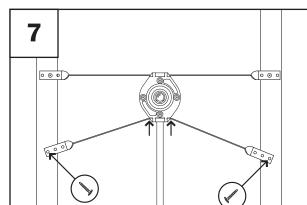

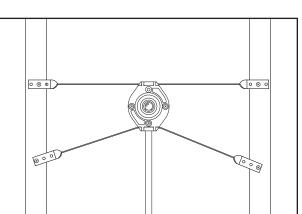

Secure ends of bottom bracket to studs.

Installation complete.



Patent # 8,061,390 1-800-821-3944 • www.siouxchief.com #IS-525-WLB ©2010 SIOUX CHIEF MFG.