

INSTALLATION INSTRUCTIONS

WARNINGS AND CAUTIONS:

- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- If you are unsure about any part of these instructions, consult an electrician.
- Controlling a load in excess of the specified ratings will damage the unit and pose risk of fire, electric shock, personal injury or death. Check your load ratings to determine suitability for your application.
- Do not install this unit to control a receptacle.

WARNINGS AND CAUTIONS:

- Disconnect power at circuit breaker or fuse when servicing, installing or removing fixture.
- Do not touch the surface of the lens. Clean outer surface with a damp cloth only.
- The OSS10-INx Vacancy Sensor is intended to replace a standard light switch.
- Use this device **with copper or copper clad wire only**.

Tools needed to install your Sensor

- Slotted/Phillips Screwdriver Electrical Tape Pliers
 Pencil Cutters Ruler

Features

- CEC Title 20 and 24 Compliant
- Manual ON / Auto OFF
- Time Delay: 30 seconds to 30 minutes
- LED (Red): Visible status indicator for determining sensing technology operation
- Vacancy Confirmation: a 30 second grace period is enabled in case of False OFF
- Leviton's Decora® design
- White LED NightLight function with Vacancy Sensor
- NightLight Activates when Low Ambient Light Present
- Adjustable NightLight Levels
- Adjustable horizontal blinders for both left and right PIR masking

DESCRIPTION

Leviton Cat. No. OSS10-INx, Designer Wall Switch Vacancy Sensor with LED NightLight, is designed to detect motion from a heat-emitting source (such as a person in a room) within its field-of-view (monitored space). The user must manually switch the lights on using the push button, then either the OSS10 will switch them off automatically or the user can choose to turn them off manually using the push button. The controlled lights will remain ON until vacancy is detected and the scheduled time-delay has expired. The LED NightLight operates separately from controlled room lights and will turn ON via a photocell when the ambient light in the space is approximately less than 1 footcandle and turn OFF when the ambient light exceeds 5 footcandles. The LED NightLight is adjustable for continuous mode or a dim mode. In the dim mode the LED dims to approximately 5% of full brightness after 2 minutes of no occupancy. The LED NightLight will fade up and return to the adjustable setting when occupancy is detected and the ambient light level present to the photocell is less than 1 footcandle. The LED NightLight consumes less than one half of a watt providing energy savings and guide lighting when room lights are off. The LED NightLight output is fully adjustable with a simple dial setting.

The OSS10 works well anywhere a manual ON only vacancy sensor with LED NightLight is desired and has a maximum of 30 minute time-delay setting to conform to California Title 20 and 24 requirements. This sensor is UL listed and has a limited 5-year warranty.

PASSIVE INFRARED (PIR) TECHNOLOGY DESCRIPTION

The Vacancy Sensor senses motion within its coverage area of 2100 sq. ft maximum and controls the connected lighting. This is a self-contained device which provides sensing and light control. The OSS10 is a manual ON device with automatic OFF when vacancy is detected.

The Vacancy Sensor uses a small semiconductor heat detector that resides behind a multi-zone optical lens. This Fresnel lens establishes dozens of zones of detection. The Sensor is sensitive to the heat emitted by the human body. In order to trigger the Sensor, the source of heat must move from one zone of detection to another. The device is most effective in sensing motion across its field-of-view, and less effective sensing motion towards or away from its field-of-view (refer to Field-of View diagrams). Keep this in mind when selecting the installation location.

DESCRIPTION cont'd


Note that vacancy sensors respond to rapid changes in temperature, so care should be taken not to mount the device near a climate control source (i.e. radiators, air exchanges, and air conditioners). Hot or cold drafts will look like body motion to the device and will trigger it if the unit is mounted too close. It is recommended to mount the Vacancy Sensor at least 6 ft. away from the climate control source. The device can be mounted in a single gang wall box.

In addition, it is also recommended NOT to mount the Vacancy Sensor directly under a large light source. Large wattage bulbs (greater than 100W incandescent) give off a lot of heat and switching the bulb causes a temperature change that can be detected by the device. Mount the Vacancy Sensor at least 6 ft. away from large bulbs. If it is necessary to mount the device closer, lower the wattage of the bulb directly overhead.


INSTALLING YOUR SENSOR

NOTE: Use check boxes when Steps are completed.

Step 1 **WARNING: TO AVOID FIRE, SHOCK, OR DEATH; TURN OFF POWER** at circuit breaker or fuse and test that power is off before wiring!

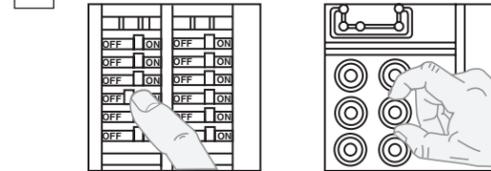


Step 2 **Identifying your wiring application (most common):**
NOTE: If the wiring in the wall box does not resemble this configuration, consult an electrician.

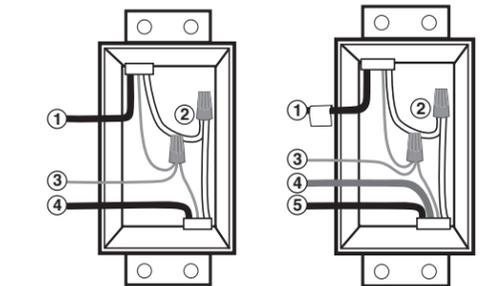

- Single-Pole**
- Line (Hot)
 - Neutral
 - Ground
 - Load
- 3-Way**
- Line or Load (See ***IMPORTANT instruction**)
 - Neutral
 - Ground
 - First Traveler – note color
 - Second Traveler – note color

***IMPORTANT:** For 3-Way applications, note that one of the screw terminals from the old switch being removed will usually be a different color (Black) or labeled Common. Tag that wire with electrical tape and identify as the common (Line or Load) in both switch wall boxes.

Step 3 **Preparing and connecting wires:**

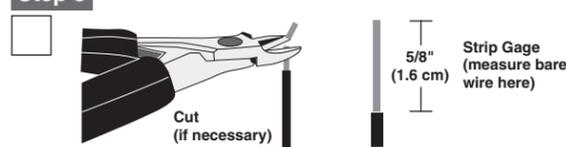



- Pull off pre-cut insulation from sensor leads.
- Make sure that the ends of the wires from the wall box are **straight (cut if necessary)**.
- Remove insulation from each wire in the wall box as shown.

For non-standard wiring applications, refer to Wire Nut and Conductor Size Chart

WIRE NUT / # OF COND. COMBINATION CHART	
1- #12 w/ 1 to 3 #14, #16 or #18	
2- #12 w/ 1 or 2 #16 or #18	
1- #14 w/ 1 to 4 #16 or #18	
2- #14 w/ 1 to 3 #16 or #18	

Step 4 **Installing your Sensor - Single-Pole Application:**

NOTE: Sensor requires a neutral connection in order to operate. Use the ground wire in the electrical box for ground connection. If there is no ground wire, ensure electrical box is grounded and attach ground wire to box with a screw.

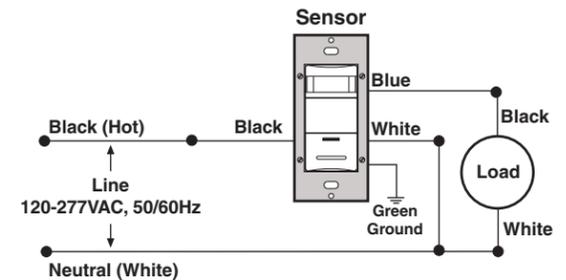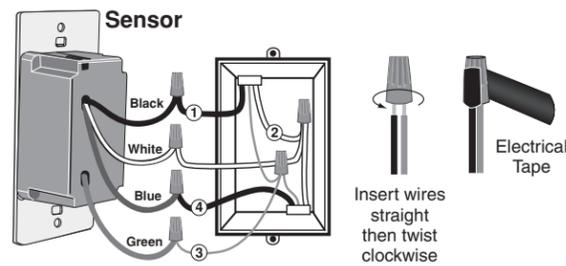



WIRING SENSOR:
 Connect wires per **WIRING DIAGRAM** as follows:
 Screw wire connector on clockwise making sure there are no bare conductors below the wire connectors. Secure each connector with electrical tape.

- Green or bare copper wire in wall box to Green lead.
- Line Hot wall box wire to Black lead.
- Load wall box wire to Blue lead.
- Line Neutral wall box wire to White lead.

NOTE: Allow approximately 30 seconds for warm-up after connected.

Step 5 **Installing your Sensor - 3-Way Wiring Application:**

NOTE: Sensor requires a neutral connection in order to operate. Use the ground wire in the electrical box for ground connection. If there is no ground wire, ensure electrical box is grounded and attach ground wire to box with a screw.

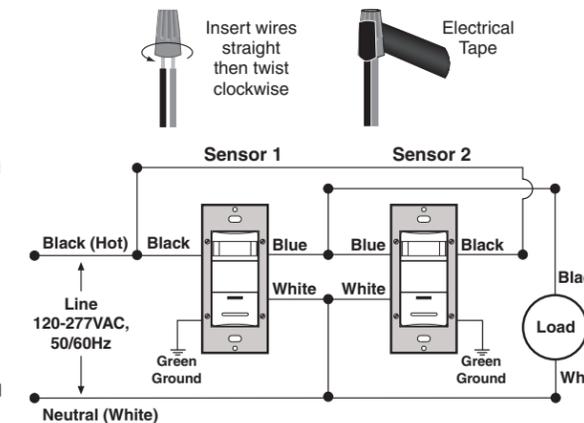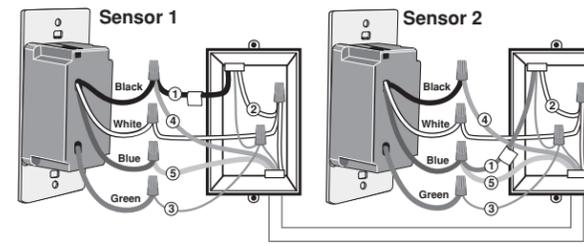

NOTE: Sensor 1 **must** be installed in a wall box that has both a LINE Hot and a Neutral connection. Sensor 2 **must** be installed in a wall box that has both a Load and a Neutral connection.

If you are unsure about any part of these instructions, consult a qualified electrician.

WIRING SENSOR 1:
 Connect wires per **WIRING DIAGRAM** as follows:
 Screw wire connector on clockwise making sure there are no bare conductors below the wire connectors. Secure each connector with electrical tape.


- Green or bare copper wire in wall box to Sensor 1 Green lead.
- Line Hot (common) wall box wire identified (tagged) when removing old switch and First Traveler from Sensor 2 to Sensor 1 Black lead.
- Second Traveler wall box wire from Sensor 2 to Sensor 1 Blue lead.
- Line Neutral wall box wire to Sensor 1 White lead.

WIRING SENSOR 2:
 Connect wires per **WIRING DIAGRAM** as follows:
 Screw wire connector on clockwise making sure there are no bare conductors below the wire connectors. Secure each connector with electrical tape.

- Green or bare copper wire in wall box to Sensor 2 Green lead.
- Load wall box wire identified (tagged) when removing old switch and Second Traveler from Sensor 1 to Sensor 2 Blue lead.
- First Traveler Line Hot from Sensor 1 to Sensor 2 Black lead.
- Second Traveler wall box wire from Sensor 2 to Sensor 1 Blue lead.
- Line Neutral wall box wire to Sensor 2 White lead.

NOTE: Allow approximately 30 seconds for warm-up after connected.

Step 6 **Testing your Sensor prior to completely mounting in wall box:**

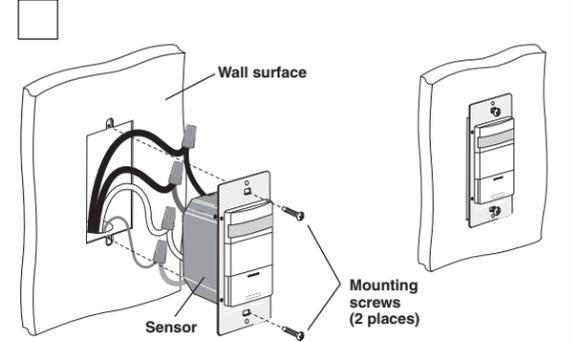

NOTE: Dress wires with a bend as shown in diagram to relieve stress when mounting device.

- Position all wires to provide room in outlet wall box for device.
- Partially secure device using long mounting screws provided.
- Restore power at circuit breaker or fuse.
- The LED indicator will flash after power is applied. Allow approximately 30 seconds for charge-up. After 30 seconds the lights will turn ON. If the lights turn ON and the LED blinks when a hand is waved in front of the lens, then the Sensor was installed properly.

If lights do not turn ON, refer to the TROUBLESHOOTING section.
NOTE: Cat. No. OSS10-INx is factory preset to work without any adjustments. If you desire to change the factory settings, refer to **FEATURES AND SETTINGS** section.

NOTE: To avoid PERMANENT DAMAGE to the unit, be careful NOT TO OVERTURN the control knobs or levers when setting the Sensor. The controls can be accessed by removing the wallplate (if applicable) and control panel cover (refer to **Sensor Features Diagram**). Use a small straight blade screwdriver to adjust knobs and blinder levers.

NOTE: DO NOT press in on blinder levers or use excessive force (refer to **Sensor Features Diagram**).

- Attach the Control Panel cover when the desired settings are complete.

FEATURES AND SETTINGS:
BLINDERS: The blinders can narrow the field-of-view of the device to prevent unwanted activation from traffic in adjacent space. There are two blinders, and each operate independently. To operate the blinders, use a finger or small screwdriver to move the blinder adjustment levers toward or away from the center of the device. The blinder levers are found above the control knobs and below the text 'BLINDERS' on the control panel. With both levers moved fully towards the center, the field-of-view is narrowed to 60°. With both levers moved fully away from the center, the field-of-view is at a maximum 180° (refer to **Sensor Features Diagram**).

Step 6 cont'd Testing your Sensor prior to completely mounting in wall box:

FEATURES AND SETTINGS:

TIME-DELAY: The user will manually turn the lights ON, and the OSS10 will keep the lights ON as long as motion is detected. When motion is no longer detected, the Sensor Unit will wait a certain amount of time and then turn the lights OFF. This wait time is called "time-out".

The "time-out" is selected from four (4) preset values. Pointing the arrow at one of the markings on the face chooses the value of time. The button LED indicator light will flash twice when the time setting has changed. The following selections are available:

OSS10-INx: Face Marking Value of Time

Face Marking	Value of Time
30S	30 second fixed time-out for performing a walk test
10M	10 minute time-out
20M	20 minute time-out
30M	30 minute time-out

NOTE: The "time-out" is factory preset to ten (10) minutes (refer to Sensor Features Diagram).

NOTE: All time durations mentioned in the instructions are approximate within 10 seconds.

RANGE: To decrease detection range and sensitivity, rotate the knob counter-clockwise (refer to Sensor Features Diagram). The detections range can be adjusted from 100% down to 35%.


NOTE: OSS10 is a Manual-ON sensor only.

NIGHTLIGHT: The OSS10-INx responds to the ambient light level present in a room. The OSS10-INx uses an internal photocell to detect when the ambient light level is approximately less than 1 foot candle activating the LED NightLight. Further, the internal photocell will turn OFF the LED NightLight when it detects an ambient light level over 5 foot candles. The LED NightLight has adjustable light output to meet the needs of the space and can be set to for continuous mode or dim mode which will automatically dim to 5% of full brightness after 2 minutes of no occupancy.


NIGHTLIGHT DIM: To adjust the LED NightLight output, turn the dial marked "NITELITE DIM" counter-clockwise to decrease and clockwise to increase light output.

NIGHTLIGHT MODE: The factory default setting for the NightLight Mode is dimmed mode. This means the LED NightLight automatically dims to 5% of full brightness after 2 minutes of no occupancy when activated by the internal photocell. To change the NightLight Mode perform the following procedure:

- Press and hold the push button for 2 seconds to determine the current mode.
 - NightLight flashes once every 1 second for Continuous Mode until the button is released.
 - NightLight flashes twice every 1 second for Dim Mode until the button is released.
- To change, hold the push button for 10 seconds and the Mode will toggle. This will be indicated by a change in the flash pattern as described above.

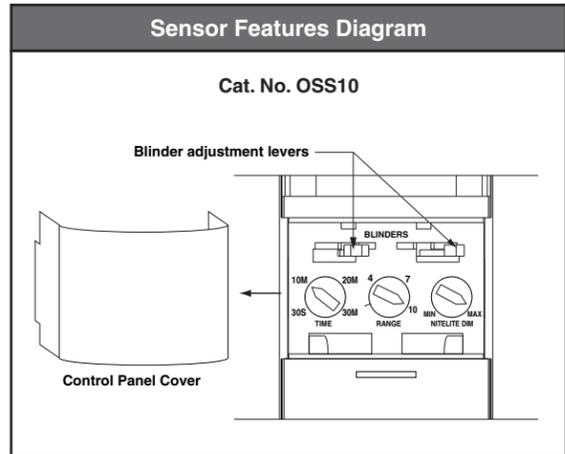

Step 7 Sensor and Wallplate Mounting:

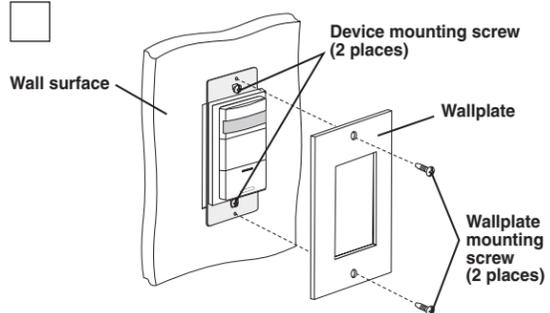

- Secure device by firmly tightening mounting screws.
- Install Decora® wallplate (sold separately).


OPERATION

PUSH-BUTTON: Cat. No. OSS10-INx has a push-button switch that toggles the lights (refer to figure). If the lights are OFF, the lights will turn ON when the button is pressed, and remain ON in the presence of motion. In the absence of motion, the Sensor Unit will time-out and turn the lights OFF.


If the lights are ON, the lights will turn OFF when the button is pressed. The lights will stay OFF regardless of motion detected. The lights will only turn ON when the user depresses the push button.

NOTES:


- The Motion Indicator LED will blink every 2 seconds while motion is detected.
- In Manual-ON mode, the button must be pressed to turn the lights ON.

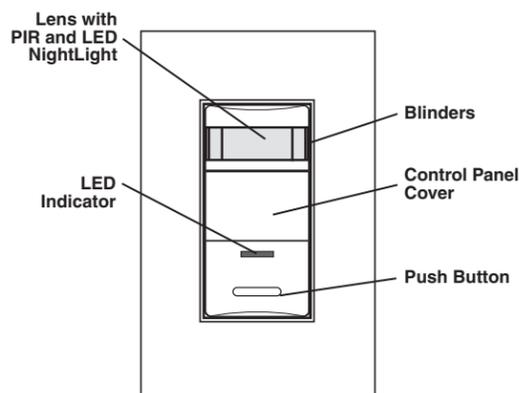

Field-of-View (Horizontal)

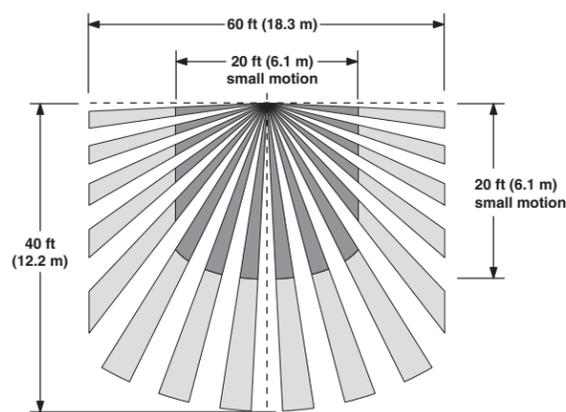

Side (Vertical) Field-of-View

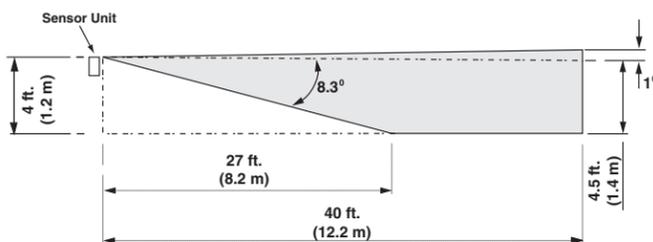

TROUBLESHOOTING

- If there is no response from the unit (the light never turns ON and the LED never blinks) 1 1/2 minutes after power is applied, then uninstall device and verify there is a ground connection at the wallbox. If there is a ground connection, verify wiring.
- If the lights constantly stay ON, even when the room is unoccupied:
 - Check the Time setting. See how this time compares to how long the lights stay ON.
 - Try lowering the Range Control. Rotate the knob counter-clockwise about 30°.
 - If the problem persists, try reducing again.

NOTE: Do Not reduce so much that the sensor cannot see normal occupancy.
 - Be sure to use the Blinders to block any unwanted hallway traffic.
 - Check for reflected, radiated heat/motion such as incandescent bulbs, mirrors, HVAC, swinging fixtures, moving mechanical parts, flowing hot water within view, overhead doors opening closing, etc.
 - Check for adjacent HVAC and/or heater ducts.
- If the sensor is turning lights OFF (False OFF):
 - Check time delay and extend to 20 or 30 minutes.
 - Check range sensitivity of PIR and increase.
- Note Minor and Major Motion FOVs. Designs should be to Minor Motion FOV for best functioning devices.
- Check the location of the sensors and anything that could be affecting them.

PRODUCT INFORMATION

- For technical assistance contact us at 1-800-824-3005
- Visit our website at www.leviton.com

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving Antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/tv technician for help.

FCC CAUTION

Any changes or modifications not expressly approved by Leviton Manufacturing Co., Inc., could void the user's authority to operate the equipment.

NOTES

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

© 2012 Leviton Mfg. Co., Inc.

DI-N0X-OSS10-00A

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 201 North Service Road, Melville, New York 11747. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation. The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.

WEB VERSION