Instructions for Models: SE-690 SE-693 SE-695 SE-697

Need Help?

For additional assistance or service call:

SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720

PHONE: 800-537-2107

EMAIL: customerservice@speakmancompany.com

WEB: www.speakmancompany.com

92-SE-690-697-R1

What You Need To Know:

<u>Tools:</u>

Required:


*Pipe Wrench







*Adjustable *7/16" A Wrench Wrench





Important Notes:

ANSI Z358.1 requires that all safety emergency equipmentshall be activated on a weekly basis to flush the line and verify proper operation. **SPEAKMAN** furnishes a testing record tag (91-0635) with each unit. On this tag, the date of inspection and the inspector's initials should be noted.ANSI Z358.1 specifies that the height of the spray heads is to be between 33" - 45" from the floor. <u>Use Thread Locker or Sealant on all threaded connections</u>. Be sure the Unit is level and plum.

Safety Tips:


Cover your drain to prevent loss of parts. Always wear eye protection.


Maintenance:


Should you need parts to repair this unit, please reference the parts listing for correct repair part number. Before any maintenance is done, be sure to shut the water supply off. Use only genuine **SPEAKMAN** parts when repairing or replacing components. To order parts, call 1-800-537-2107.


- At desired location, mount Floor Flange


 (13) on a flat, level surface using suitable anchors, making sure that one of the three ears on the Floor Flange is positioned at what will be the front of the Stanchion.
 - The Unit should be placed so that there is sufficient unobstructed area around the Stanchion.
 - Assemble 1-1/4" x 29-3/8" Pipe (1) to Floor Flange (13).
- ●Thread 1-1/4" x 1/2" Drain/Supply Cross
 ② onto Pipe ①. Side Outlets should face the front and back of the Unit, and the 1/2" male threaded outlet upward at 45° to the right side of the Unit.

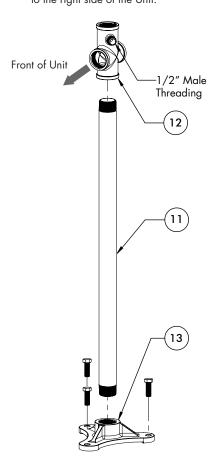


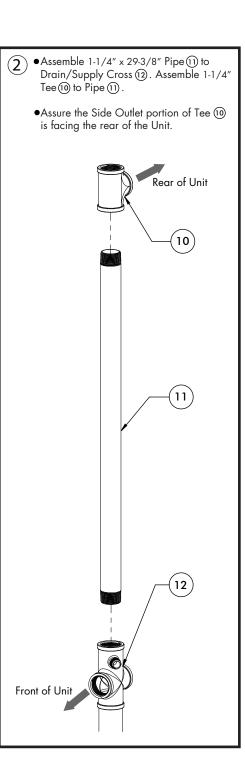


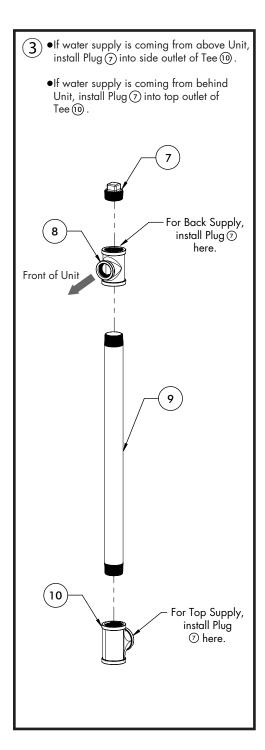


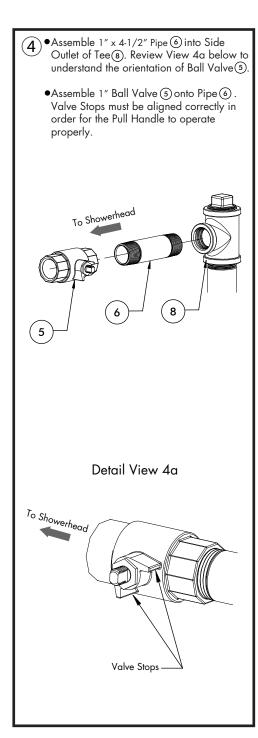


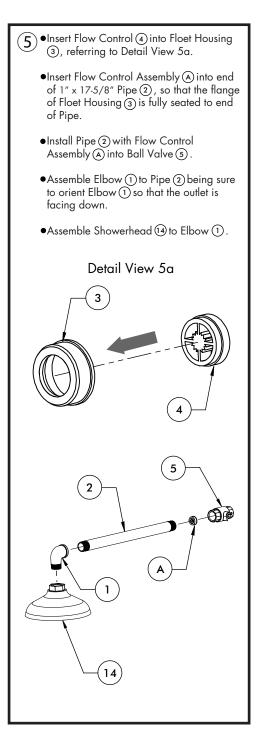


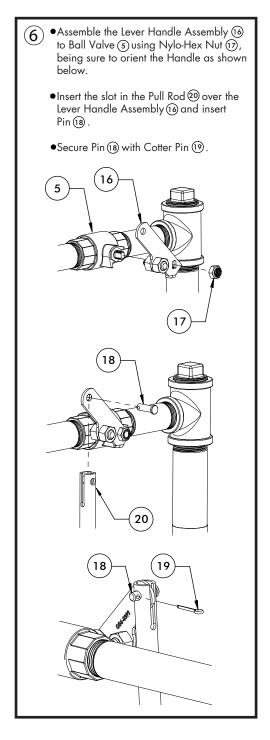


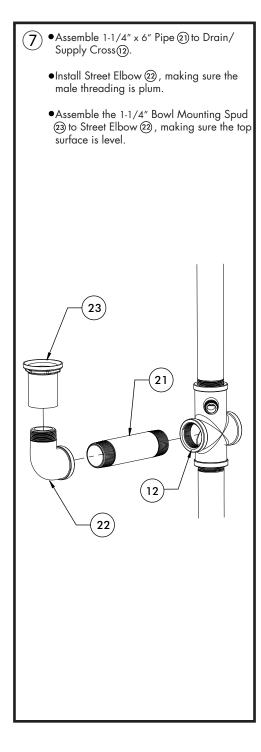

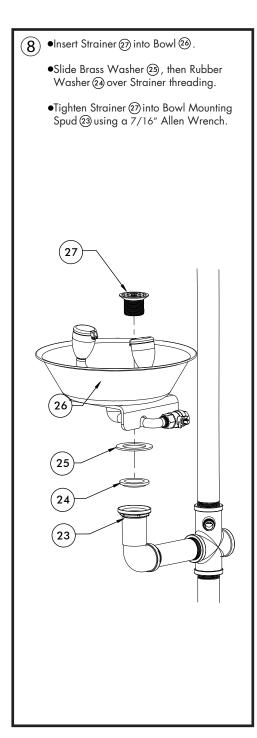


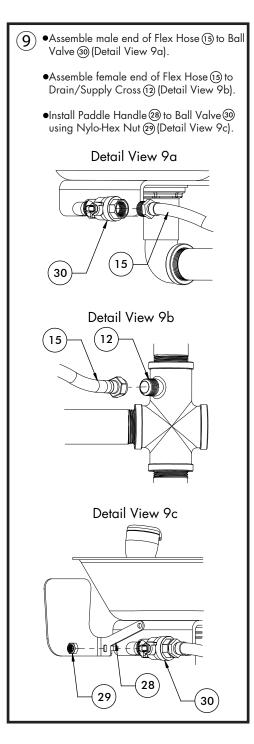

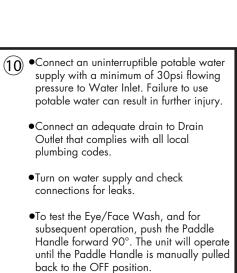

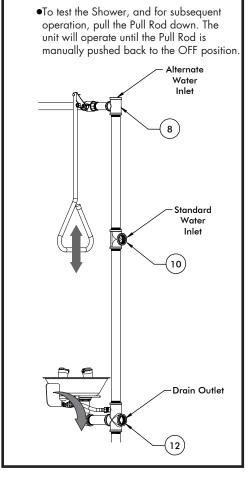

SE-690/693/695/697 EXPLODED VIEW

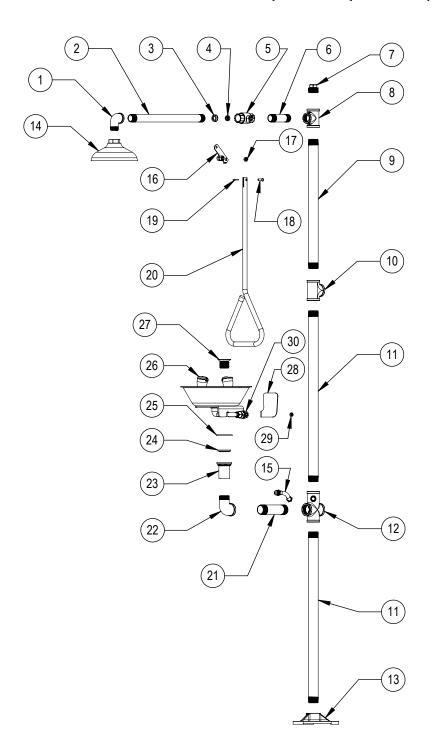

Item No.	Part No.	Description	
1	25-0253	1" x 90° Galv. Street Elbow	1
2	32-0595	1" x 17-5/8" Galv. Pipe, TBE	1
3	05-2220	Rubber Floet Housing	1
4	05-2219	20 GPM Flow Control	1
5	20-0955	1" Chrome Plated Brass Ball Valve	1
6	31-0427	1" x 4-1/2" Galv. Pipe, TBE	1
7	08-0146	1-1/4" Galv. Plug	1
8	24-0249	1-1/4" x 1-1/4" x 1" Galv. Tee	1
9	31-0596	1-1/4" x 22-1/4" Lg. Pipe, TBE	1
10	24-0257	1-1/4" Galv. Tee	1
11	31-0601	1-1/4" x 29-3/8" Lg. Galv. Pipe, TBE	2
12	05-2516	1-1/4" x 1/2" Galv. Drain/Supply Cross	1
13	26-0242	1-1/4" Galv. Floor Flange	1
14	G38-0211	8" Deluge Showerhead	1
15	G63-0095	Stainless Steel Flexible Supply Hose	1
16	G04-0399	Lever Handle Assembly with Spring Plunger	1
17	01-0880	7/16-20 UNF Stainless Steel Nylo-Hex Nut	1
18	51-0070	Clevis Pin	1
19	51-0071	Cotter Pin	1
20	G47-0046-29	29" Aluminum Pull Rod	1
21	31-0602	1-1/4" x 6" Lg. Galv. Pipe, TBE	1
22	25-0295	1-1/4" Galv. Street Elbow	1
23	05-2535	1-1/4" Galv. Bowl Mounting Spud	1
24	45-0615	Rubber Drain Washer	1
25	45-0760	Brass Drain Washer	1
26	Bowl Group	Eyewash Unit	1
26.1	G68-0090	SE-690 Stainless Steel (Non-Aerated) Eyewash Bowl	1
26.2	G68-0092	SE-693 Stainless Steel (Aerated) Eyewash Bowl	1
26.3	G68-0091	SE-695 Plastic (Non-Aerated) Eyewash Bowl	1
26.4	G68-0093	SE-697 Plastic (Aerated) Eyewash Bowl	1
27	05-2269	Strainer for Tapered Eyewash Bowl	1
28	04-0877	Paddle Handle	1
29	01-0878	3/8" Stainless Steel Nylo-Hex Nut	1
30	20-0953	1/2" Chrome Plated Brass Ball Valve	1

Repair Parts

Item No.	Part No.	Description	
5	SE-911	1" Ball Valve	
5	SE-911-SS	1" Stainless Steel Ball Valve	
14	SE-870	8" Plastic Showerhead	
20	RPG47-0046	Pull Rod	
26.1	G68-0090	SE-690 Stainless Steel (Non-Aerated) Eyewash Bowl	
26.2	G68-0092	SE-693 Stainless Steel (Aerated) Eyewash Bowl	
26.3	G68-0091	SE-695 Plastic (Non-Aerated) Eyewash Bowl	
26.4	G68-0093	SE-697 Plastic (Aerated) Eyewash Bowl	
15	RPG63-0095	Stainless Steel Supply Hose	

SE-690/SE-693 Rough-In

SE-690/693 SHOWER FLOW DATA


PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	20	75
60	4.14	25	94


SE-690 EYE/FACE WASH FLOW DATA

PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	4.5	17.0

SE-693 EYEWASH FLOW DATA

PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	3.2	14.5

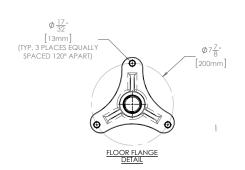

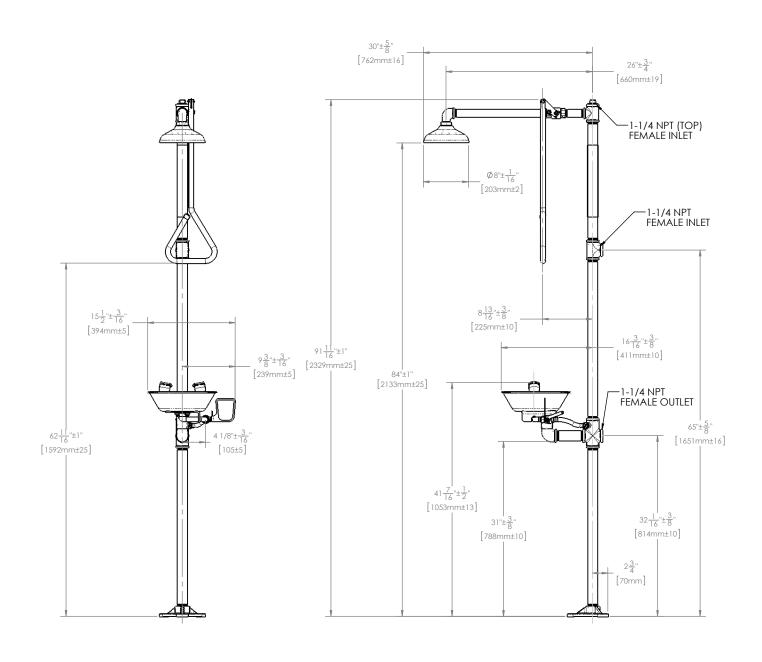

NOTE: ALL UNITS MEET EXISTING ANSI Z358.1 STANDARDS AND OSHA RULES. PRODUCT IMPROVEMENTS MAY CAUSE SPECIFICATION AND DIMENSIONAL CHANGES WITHOUT NOTICE.

SE-695/SE-697 Rough-In

SE-695/697 SHOWER FLOW DATA


PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	20	75
60	4.14	25	94


SE-695 EYE/FACE WASH FLOW DATA

PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	4.5	17.0

SE-697 EYEWASH FLOW DATA

PRESSURE		FLOW RATE	
psi	bar	gpm	L/min
30	2.07	3.2	14.5

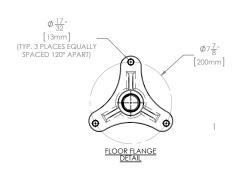

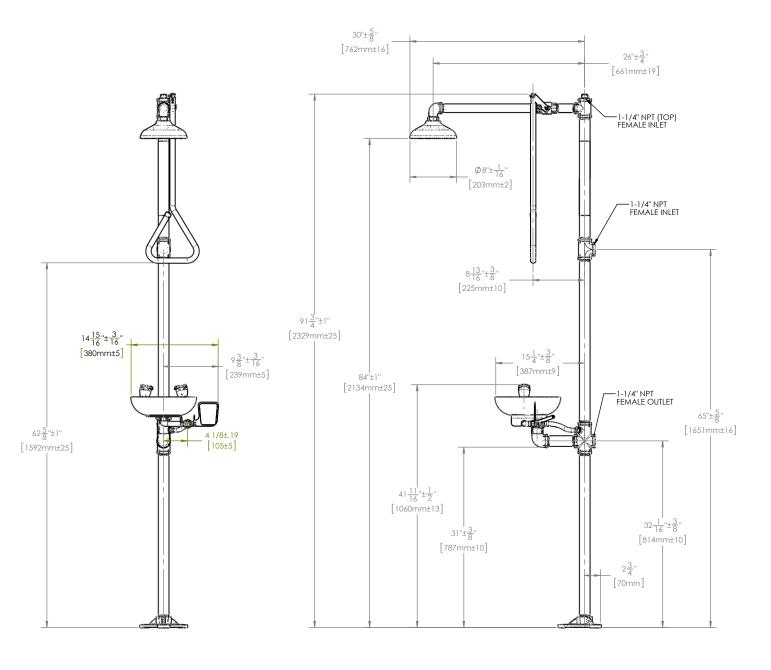

NOTE: ALL UNITS MEET EXISTING ANSI Z358.1 STANDARDS AND OSHA RULES. PRODUCT IMPROVEMENTS MAY CAUSE SPECIFICATION AND DIMENSIONAL CHANGES WITHOUT NOTICE.